



The Pay-Per-View Purchase Control

The **Pay-Per-View (PPV) Purchase Control** feature ensures that only household members who know your **PURCHASE PASSWORD** can order a **PPV** program. If you create a **PURCHASE PASSWORD**, a password window will automatically pop-up when you choose to order a **PPV** program.

CREATE A PURCHASE PASSWORD:

1. Press **MENU** on your remote
2. Select **PARENTAL CONTROL**
3. Select **SET UP PASSWORDS**
4. Select **CREATE PURCHASE PASSWORD**
5. Create and confirm your 4-digit password

TO CHANGE YOUR PASSWORD:

1. Follow steps 1 – 3 from above
2. Select **CHANGE PURCHASE PASSWORD**
3. Enter your old purchase password in the pop-up window that appears
4. Create and confirm a new 4-digit password

TO REMOVE YOUR PASSWORD:

1. Follow steps 1 – 3 from **CREATE A PURCHASE PASSWORD**
2. Select **REMOVE PURCHASE PASSWORD**. A window will appear indicating no password will be required for **PPV** purchases.
3. Press **SELECT** to continue
4. Enter your old purchase password to complete the process

If you forget your **PURCHASE PASSWORD**, please contact the Help Desk at **1 866 635-8375**.

