



using your
Treo™ 600
smartphone
by palmOne

Includes setup information and instructions for most tasks

Copyright

Copyright © 2004 palmOne, Inc. All rights reserved. palmOne, Treo, the palmOne and Treo logos, Blazer, Palm, Palm OS, HotSync, Graffiti, and Palm Powered are among the trademarks or registered trademarks owned by or licensed to palmOne, Inc. This product contains ACCESS Co., Ltd.'s NetFront 3.0 Internet browser software. © 1996-2004 ACCESS Co., Ltd. and ACCESS Systems America, Inc. NetFront is the trademark or registered trademark of ACCESS Co., Ltd. in Japan and in other countries except the United States of America. NetFront is a registered trademark of NetFront Communications, Inc. in the United States of America and is used under a license. A portion of this software includes software modules developed by the Independent JPEG group. All other brand and product names are or may be trademarks of, and are used to identify products or services of, their respective owners.

Disclaimer and limitation of liability

palmOne, Inc. and its suppliers assume no responsibility for any damage or loss resulting from the use of this guide. palmOne, Inc. and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this software. palmOne, Inc. and its suppliers assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs. Be sure to make backup copies of all important data on other media to protect against data loss.

Software download available

Palm® Desktop software is supplied on a CD-ROM disc. If you do not have access to a CD-ROM drive for your computer, you can download this software from www.palmOne.com.

Contents

- 5 Welcome
- 6 If you read nothing else...
- 7 **read this now:**
 - getting started**
- 8 What you'll need
- 9 Treo overview
- 13 Charging the battery
- 15 Turning Treo on and off
- 16 Making your first call
- 19 **first day:**
 - learning the basics**
- 20 Moving around the Treo™ screen
- 24 Using the keyboard
- 27 Launching applications
- 29 Setting up your computer
- 32 Synchronizing your contacts and other data
- 33 Battery life
- 35 Where to learn more
- 37 **first week:**
 - using phone, web, and messaging**
- 38 Phone overview
- 40 Dialing calls
- 43 Receiving calls
- 44 Using voicemail
- 46 Managing active calls
- 47 More ways to manage calls
- 50 Managing contacts
- 52 Defining Favorites buttons
- 55 Using a phone headset
- 56 Browsing the web
- 63 Working with pictures
- 67 SMS
- 73 Sending and receiving email
- 83 **first two weeks:**
 - using organizer features**
- 84 Calendar
- 90 To Do List
- 93 Memo Pad
- 94 CityTime

- 96 Calculator
- 99 Looking up contacts and other information
- 102 Beaming information
- 105 **first month:**
 - managing applications
- 106 Installing applications
- 109 Removing applications
- 110 Using Application Info
- 111 Using expansion cards
- 115 **when you're ready:**
 - customizing your Treo™
smartphone
- 116 Phone settings
- 120 System Sound settings
- 121 Display and appearance
- 123 Applications Launcher settings
- 124 Button settings
- 126 Date and time settings
- 128 General Preferences
- 129 Locking your phone and data
- 135 **if something happens:**
 - help
- 136 Upgrading from a Palm Powered™ device
- 138 Trouble installing Palm Desktop?
- 139 Resetting your Treo
- 141 Screen
- 142 Network connection
- 145 Synchronization (HotSync)
- 148 Mail
- 151 Web
- 152 Pictures
- 153 Third-party applications
- 154 Errors
- 155 Making room on your Treo
- 156 Voice quality
- 157 Glossary
- 161 Index
- 173 Specifications

Welcome

Congratulations on the purchase of your Treo™ 600 smartphone by palmOne. In one compact and indispensable device, you now have all of the following:

- an advanced mobile phone*
- a Palm Powered™ organizer with portable expansion capability (SD media)
- a digital camera
- email*
- web browsing*
- SMS*

This guide will help you set up your Treo and quickly learn to use it.

*Requires a service contract with your wireless service provider



LOOK HERE: Don't miss the helpful tips and cross-references given in this column.

If you read nothing else...

This guide is designed to help you start using your Treo 600 smartphone quickly, beginning with just the basics. As you become more comfortable with your Treo smartphone and want to learn more, come back and read the other sections.

Read This Now: Getting Started

Follow these instructions to set up your Treo smartphone and make your first call.

First Day: Learning the Basics

Read these pages to learn how to enter text, move around the screen, and set up synchronization.

First Week:

Using Phone, Web, and Messaging

Learn how to use all the great wireless features of your Treo smartphone, including phone, email, web browsing, and messaging.

First Two Weeks:

Using Organizer Features

Your Treo is not just a phone. It also includes a full-featured Palm Powered organizer that gives you instant access to your Calendar, To Do List, Memo Pad, CityTime, Calculator, and more.

First Month: Managing Applications

Learn how to add or delete extra applications and use an expansion card with your Treo.

When You're Ready:

Customizing Your Treo

Once you've learned the basics, you'll want to explore additional features on your Treo smartphone and customize its settings.

If Something Happens: Help

If something goes wrong or you can't figure out how to use a Treo feature, we can help. See these pages for answers to frequently asked questions.

read this now:

getting
started



What you'll need

As you work through the instructions in this guide, you'll need all the items that came in the Treo™ 600 smartphone box (see page 9) as well as the following:

- an activated wireless account with data services*
- a location with wireless coverage for your phone
- an electrical outlet
- the computer that you'll use to synchronize your personal data
- the CD included in the box

* You cannot use email or web browsing without data services.

Treo overview

You should have received all of the following components in the Treo 600 smartphone box:

Hardware

- Treo handset
- protective case
- AC charger
- USB HotSync® cable
- headset

Documentation and software

- Using Your Treo (this electronic guide)
- Synchronization software CD

Treo handset features


The following illustrations show the locations and names of the physical features of the Treo 600 smartphone. Refer to these illustrations while following the instructions in this guide.




You can purchase a separate serial HotSync cable and other accessories. For more information, visit www.palmOne.com.

Warranty does not cover damage by Secure Digital (SD™) cards that do not meet SD Memory Card Specifications. SD cards that do not meet SD Memory Card Specifications may damage your Treo 600.



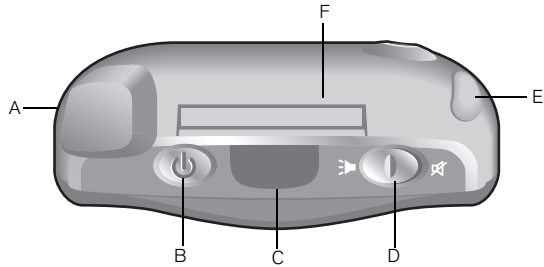

- | | |
|-------------------------|------------------------|
| A. Antenna | D. Ringer switch |
| B. Wireless Mode button | E. Stylus |
| C. Infrared (IR) port | F. Expansion card slot |

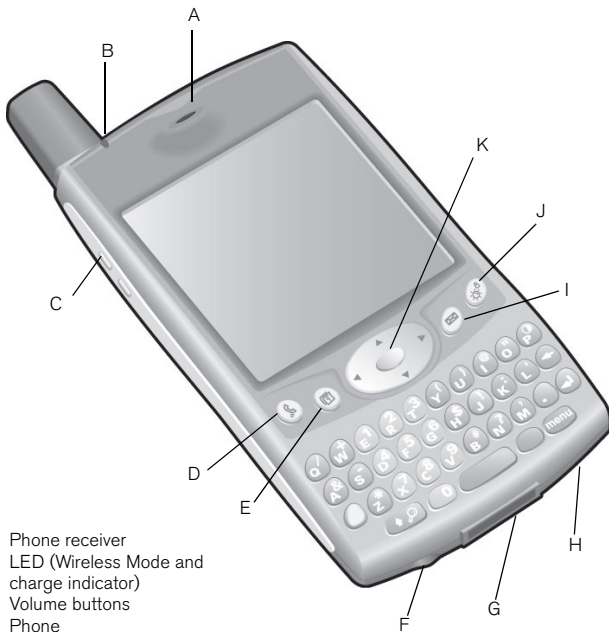


- A. Phone receiver
- B. LED (Wireless Mode and charge indicator)
- C. Volume buttons
- D. Phone
- E. Calendar
- F. Headset jack
- G. HotSync and power supply connector
- H. Microphone
- I. SMS
- J. Screen on/off button
- K. 5-way navigation control




Be careful not to scratch or crush your Treo's touchscreen. Use the pouch provided with your Treo. Do not store it in a place where other items might damage it.



IMPORTANT: The Treo 600 speaker includes a large magnet, so be sure not to store your Treo near credit cards or other items that could be demagnetized.

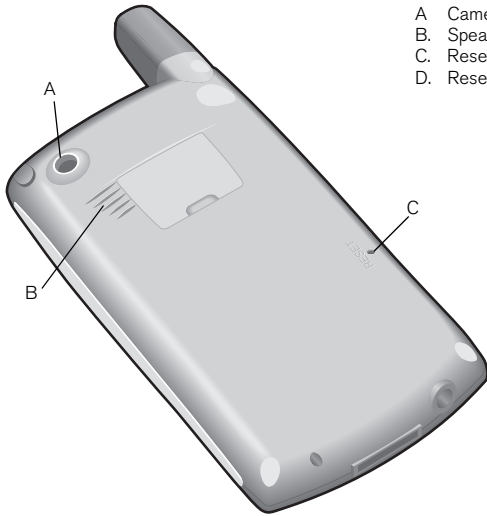

- A. Camera lens
- B. Speaker
- C. Reset button
- D. Reset tool (within stylus)

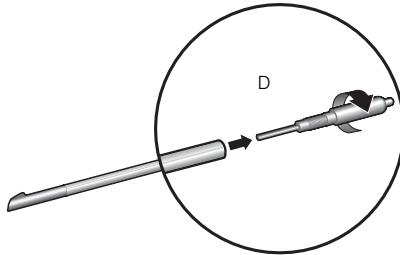

Charging the battery



Before using your Treo, you need to fully charge the battery. Your phone may not turn on at all when you first remove it from the box. We recommend that you charge your phone for three hours or until the LED is solid green.

1. Plug the AC charger into a wall outlet.
2. Connect the charger cable to the bottom of the Treo, with the word UP facing the same direction as your Treo screen.



A. LED






3. To confirm that your Treo is charging, check the LED.
 - When the LED is solid red, your Treo is charging.
 - When the LED turns solid green, your Treo is fully charged.
 - If the LED does not light up when you connect your Treo to the charger, double-check the cable connection and the electrical outlet to which it is connected.



Battery consumption varies based on your personal usage. Consumption factors include signal strength, backlight and speakerphone usage, and whether calls are data or voice calls.





After you turn on your Treo, the onscreen battery gauge displays the power status:

- Full battery icon : Battery is charged
- Partial battery icon : Battery has some power and is not charging
- Empty battery icon : Battery needs charging immediately
- Red lightning bolt : Battery is charging
- Green lightning bolt with full battery icon : Battery is fully charged

Turning Treo on and off



You can use the Palm OS® features of your Treo 600 smartphone independently of the wireless features and applications. Therefore, the screen and Wireless Mode are designed to be turned off and on separately.

Turning the screen on and off

1. Press the Screen button  to turn on the screen.
2. Briefly press the Screen button  to turn off the screen.

Turning Wireless Mode on and off

Wireless Mode allows your Treo to connect to your wireless service provider's network so that you can make and receive phone calls and use other wireless services.

1. Press and hold the Wireless Mode button  to turn on Wireless Mode. You will hear a series of ascending tones. When Wireless Mode is on, your Treo connects to a wireless network, and you can use the phone and Internet features (if supported by the local network).
2. Press and hold the Wireless Mode button  again to turn off Wireless Mode. You will hear a series of descending tones. When Wireless Mode is off, your Treo is not connected to your wireless service provider's network. You can still use the organizer and other Palm OS features. This is ideal for airplane flights and for maximizing battery life.



Treo includes a keyboard backlight for nighttime use. The keyboard backlight activates automatically when the screen turns on, but shuts off if the keyboard is not in use. When the screen is on, press Option, and then P to manually activate the keyboard backlight.



Making your first call






If No Service appears in the upper left, you are out of a wireless coverage area. If you believe you are in a wireless coverage area and this problem persists, contact your wireless service provider for assistance.

You can adjust the contrast or how the screen responds to the stylus, at any time. (see page 121).

Learn how to quickly redial your most recent calls on page 42.

We recommend that you charge your Treo for a full three hours (or until the LED is solid green) before using it for the first time.

1. Press Phone .
2. If a Setup screen appears, follow the instructions to select a language and calibrate the screen. If a Setup screen doesn't appear, you're ready to continue; press Center to unlock the keyguard feature.
3. Press and hold the Wireless Mode button . You will hear a series of ascending tones.
4. Allow the Treo to complete a network search. The search may take several seconds. When it's done, the network status icon  appears in the upper right.
5. Tap the onscreen Dial Pad or use the number pad on the Treo keyboard to type the desired phone number.
6. Press Center to dial.
7. When your call is complete, use the 5-way navigation control to choose Hang Up All.





Adjusting call volume


While a call is in progress, press the volume buttons on the side of your Treo to adjust the call volume.



A. Volume buttons

What's my number?


1. Make sure Wireless Mode is on (see page 15).
2. Press Phone .
3. Press Menu .
4. From the Options menu, choose Phone Info (/I).

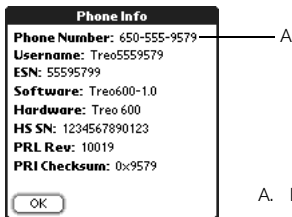

A. Look here for your phone number



 If your phone number doesn't appear in Phone Info, consult your wireless service provider.



first day:

learning the
basics



Some third-party applications may not work with the 5-way navigation control, and you must use the stylus instead.

In this guide, we use arrow icons to indicate directions on your Treo's 5-way navigation control. These are different from any onscreen arrows that you tap with your stylus or select with the 5-way navigation control to display pick lists.

5-way buttons:




On screen arrows:



Moving around the Treo™ screen

To move around the Treo™ 600 smartphone screen, you can use the 5-way navigation control, or tap items on the screen with the stylus. Once you've used your Treo for a while, you'll find your own favorite way to scroll, highlight, and select menu commands. The 5-way navigation control includes Right, Left, Up, Down, and Center buttons.

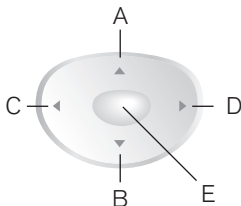

- A. Up
- B. Down
- C. Left
- D. Right
- E. Center

Scrolling through screens

In the same way that you scroll on a computer, you scroll on the Treo to move from field to field, or page to page, or in some cases to highlight an item or option in a list. You can scroll in any of several ways:

- Press the 5-way navigation control on the front of the Treo. Pressing Right ►, Left ◀, Up ▲, and Down ▼ moves to the next field, button, or action in that direction.
- Press Option ○ and Up ▲ or Down ▼ to scroll to the next page of information within the current record.

- When inside a text field, press Up ▲ and Down ▼ to scroll through the text.
- Tap an onscreen scroll arrow.



- Drag the slider of an onscreen scroll bar.

Highlighting items

The 5-way navigation control lets you highlight items before launching or selecting them.

- When an onscreen button (OK, Cancel, etc.) or pick list is highlighted, a blue glow appears around the border.



- When a phone number, email address, or web link is highlighted on a web page or in a message, the text appears in reverse type (light text on a dark background).
- When an entire text entry field is highlighted, you can press Center to edit the text. After you edit the text, press Center again to highlight the entire field.

You can also use the stylus to highlight text on the screen. Highlighted text appears in reverse type.

- Drag the stylus across the text you want to highlight.
- Double-tap a word to highlight it.
- Triple-tap a line of text to highlight it.



Once you've launched an application (see page 27), you can experiment with using the 5-way navigation control to highlight different screen elements.



Most menu commands have keyboard shortcuts listed in the menu. To use a shortcut, press Menu plus the shortcut letter. You don't have to see the menu item to use the shortcut.

Accessing command buttons

Command buttons, such as New, OK, and Details appear at the bottom of the screen. In many cases you can jump directly to these buttons instead of scrolling to them.

- From a list screen, such as the Contacts list or Mail inbox, press Right ► to jump to the first button.
- From a screen where you create or edit entries, such as Edit Contacts or Day View in Calendar, press Center to jump to the first button.
- From a dialog, such as Edit Categories, press Right ► to scroll to the first button, or press Option Ⓞ, and then Return ↵ for OK, or Option Ⓞ and then Backspace ⌫ for Cancel.

Choosing or activating items

After highlighting an item with the 5-way navigation control, you can choose or activate it by pressing Center. You can also choose an item by tapping it with the stylus.

Selecting menu items

Many applications have menus to provide access to additional features. These menus are usually hidden from view, but they appear when you press Menu (menu). To get the most out of your Treo, it's a good idea to familiarize yourself with the additional features available through the various application menus.

1. Press Menu (menu) to display an application's menus.
2. Press Right ► and Left ◀ to switch between menus.

3. Press Up ▲ and Down ▼ to highlight a menu item.
4. Press Center to choose the menu item, or press Menu (☰) to close the menu and cancel your selection.



To exit the pick list and cancel your selection, press Left ◀ or Right ▶, or tap outside the pick list.

Choosing options in a pick list

A range of options is often presented in a type of menu called a pick list, which can be identified by a downward-pointing arrow. Pick lists are different from the application menus described above.

To choose from a pick list, do one of the following:

- Use the 5-way navigation control to highlight the pick list, and then press Center to display the items in the list. Press Up ▲ and Down ▼ to highlight the item you want, and then press Center to accept your selection.
- Use your stylus to tap the pick list, and then tap the item you want from the list.






Using the keyboard



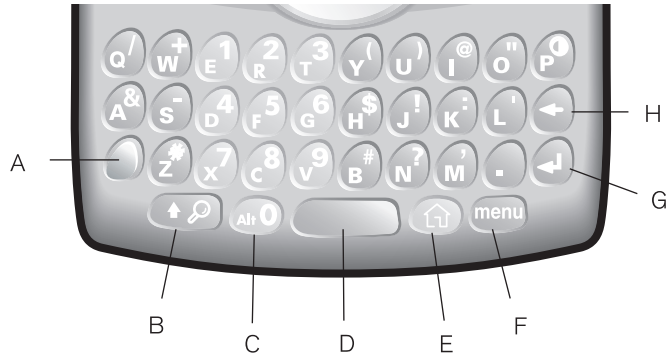

When using the keyboard, most people find it easiest to hold the Treo with two hands and use the tips of both thumbs to press the keys, as shown above.



- A. Option
- B. Shift/Find
- C. Alt
- D. Space
- E. Applications Launcher
- F. Menu
- G. Return
- H. Backspace

Using the keyboard backlight

- To turn on the backlight, press Option , and then . The backlight may not be visible in bright sunlight.
- The backlight turns off if the keyboard is not in use.

Entering lowercase and uppercase letters

- To type lowercase letters, press the desired keys.
- To type an uppercase letter, press Shift (⇧), and then type a letter. You don't need to hold down Shift while typing a letter.
- To turn Caps Lock on, press Shift (⇧) twice. To turn it off, press Shift (⇧) again. When Caps Lock is on, this symbol appears in the lower right:



Entering numbers, punctuation, and symbols that appear above the letters on the keys

- Press Option (⌥), and then press the key with the desired character shown above the letter. You don't need to hold down Option while pressing the second key.
- To turn Option Lock on, press Option (⌥) twice. To turn it off, press Option (⌥) again. When Option Lock is on, this symbol appears in the lower right:



Entering other symbols and accented characters

1. Type the character that corresponds to the symbol or accented character you want. See the table on the next page.
2. Press Alt (⌘).
3. Press Up (↑) or Down (↓) to highlight the desired character.
4. Press Center to insert the character, or just continue typing the next character.



In many applications you can view a list of all the alternate characters. From the Edit menu, choose Keyboard Help (/G).


Some application views, for example, Dial Pad and Calculator, automatically default to Option Lock, so you don't have to hold down Option to enter numbers.

The alternate characters are grouped according to their similarity to the corresponding key. For example, the alternate characters available for the e key are é, è, ê, ë and €.

Symbols and accented characters

| Type... | then press Alt to choose... | Type... | then press Alt to choose... | Type... | then press Alt to choose... |
|---------|-----------------------------|---------|-----------------------------|---------|---|
| a | á à â ã ä å æ | o | ó ò ô õ ö ø ø | 0 | % % ^o |
| A | Á À Â Ã Ä Å Æ | O | Ó Ò Ô Õ Ö Æ | 1 | ¹ / ₄ ¹ / ₂ |
| b or B | ß | p or P | % | 2 | 2 |
| c | ç ¢ © ^ ^ | r or R | ® | 3 | ³ / ₄ |
| C | Ç ¢ © ^ ^ | s | ß Šš Š š | . | ? ! ... |
| d | † ‡ | S | ß Šš Š š | , | , |
| D | † ‡ † | t or T | ~ ™ † ‡ | ! | ! |
| e | é è ê ë € | u | ú ù ü û | ? | ¿ |
| E | É È Ê Ë € | U | Ú Ù Û Û | : | ;-) :-(-) :-D |
| f or F | f | x or X | x | ' | ' ' < > ~ ` |
| i | î ï î | y | ÿ ¥ | " | " " « » |
| I | Í Î Ï | Y | ÿ ¥ | \$ | € £ ¥ ¢ |
| l or L | £ | | | + | & |
| m or M | µ | | | - | - ~ • = - - |
| n | ñ | | | / | % \ ÷ √ |
| N | Ñ | | | # | = |
| | | | | (| < [{ ‹ |
| | | | |) | >] } › |

Launching applications

You can use the application buttons on the front panel to launch two applications. To access a button's primary application, simply press the button. To access a button's secondary application, press Option , and then press the application button. The fourth button turns the screen on and off and controls the keyboard.



- A. Phone
- B. Calendar
- C. SMS
- D. Screen/Keyguard



You can also customize the buttons yourself; see page 124 for details.

Your wireless service provider may have customized the applications associated with each button.



Press Applications Launcher repeatedly to cycle through different categories of applications.

In the Applications Launcher, you can type the first few letters of the application's name to highlight it. For example, if you type ci it highlights CityTime. However, if you pause between typing letters, it highlights Calc, and then the first application that starts with i.

| Button | Primary application | Secondary application |
|--------|---------------------|------------------------|
| | Phone | + Blazer® web browser |
| | Calendar | + CityTime |
| | SMS | + Mail |
| | Screen (on/off) | + Keyguard |

In Palm OS®, you access all available applications through a screen called the Applications Launcher:

1. Press Applications Launcher .
2. Use the 5-way navigation control to highlight the application you want to use.
3. Press Center to launch the selected application.



Setting up your computer

Synchronization lets you enter information on your computer (using Palm® Desktop or Microsoft Outlook for Windows) and then efficiently transfer that information to your Treo. At the same time, changes you make on your Treo are transferred to Palm Desktop or Microsoft Outlook. Even if you manage all your contacts on your Treo, synchronization is a great way to back up your data.

Before you can synchronize, you need to install Palm Desktop software on your computer. Even if you already own a Palm Powered™ device and have installed a previous version, you must install the software that comes with your Treo.

System requirements

Windows 98SE, Me, 2000, or XP*

- 32 MB of memory
- 30 MB of free hard disk space
- CD-ROM drive
- available USB port and USB HotSync® cable (cable included with your Treo)

Windows NT 4

- 32 MB of memory
- 30 MB of free hard disk space
- CD-ROM drive
- available serial port and serial HotSync cable (cable sold separately)

Macintosh OS 10.1-10.3.x*

- 32 MB of memory
- 25 MB of free hard disk space
- CD-ROM drive
- USB port and USB HotSync cable (cable included with your Treo)

*later versions may also be supported



IMPORTANT: If you're upgrading from another Palm Powered device, follow the upgrade steps on page 136 before you set up your computer for your new Treo.


If you are synchronizing with a computer that is running Windows NT 4, you must use a serial HotSync cable, available for separate purchase at www.palmOne.com.



For best performance, plug your USB synchronization cable directly into a USB port on your computer. If you use a USB hub, make sure it is a powered hub.

Connecting your Treo to your computer

1. Plug the AC charger into a wall outlet. If necessary, connect an adapter.
2. Connect the charger to the short end of the HotSync cable. Be sure to match the sides of the connectors labeled UP.
3. Plug the USB HotSync cable into an available USB port on your computer.
4. Connect the long end of the HotSync cable to the bottom of your Treo with the button facing up.

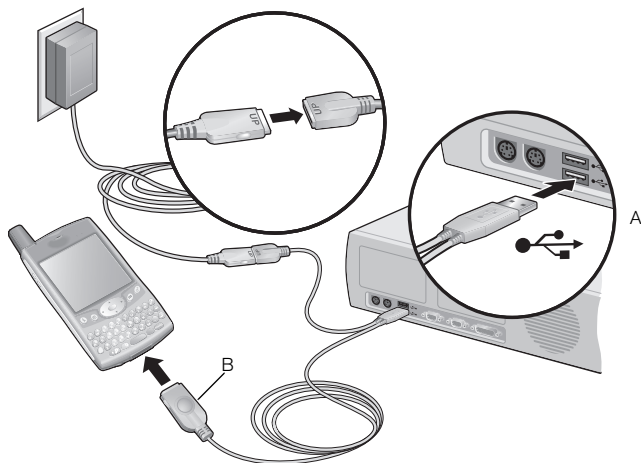

- A. USB cable
B. HotSync button

Installing Palm Desktop software on your computer

Your computer needs all of its resources available to install the desktop synchronization software. Follow these guidelines for a successful installation:

1. Exit any applications that are currently running on your computer, including those running in the background.
2. Insert the CD that came with your Treo into the CD-ROM drive on your computer. If you are installing on a Macintosh, double-click the CD icon on the desktop, and then double-click the Installer icon.
3. Follow the onscreen instructions of the installation program. Click Install Now to install Palm Desktop software. Please note these important points about the installation process:
 - If a language selection screen appears, choose the same language you use on your Treo.
 - During the installation process, you will be prompted to synchronize for the first time.



If you are installing on a computer at work, make sure your company allows you to install new software. Contact your company's IT department for help.




Synchronizing your contacts and other data



We strongly recommend that you install Palm Desktop software soon after you start using your Treo, and that you synchronize your Treo and computer frequently to keep your information up-to-date (and backed up) in both locations.

Before you can synchronize your contacts and other personal data, you must install Palm Desktop software from the CD that came with your Treo. See page 31 for instructions.

1. Connect your Treo to your computer as described on page 30.
2. Press the HotSync button on the cable.

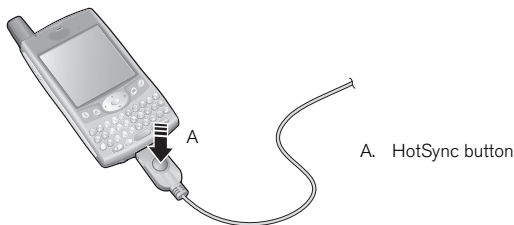

3. Wait for your Treo to display a message indicating that the process is complete.
 - If nothing happens, make sure that you installed Palm Desktop software and that the HotSync Manager application is running on your computer (🔄).
 - If you want to synchronize data with applications other than Palm Desktop or Microsoft Outlook, you need to purchase additional third-party conduit software.
 - If you have any problems performing a HotSync operation, see page 145 for troubleshooting suggestions.

Battery life

Battery life depends on individual usage. When used as a phone, your Treo battery provides up to 4 hours of talk time or up to 10 days of standby time on the 1900 MHz band. Talk time is slightly lower when operating on the cellular 800 MHz band. When used as an organizer only (no phone), the battery provides up to 4 weeks of normal use.

Maximizing battery life

You can increase the life of your Treo battery by following a few easy guidelines. Remember that battery life depends on how you use your Treo.

- Charge your Treo whenever you're at your desk. The Li-Ion battery in your Treo has a much longer useful life when it is topped off frequently, versus charging it after it is fully drained.
- The wireless features (phone, email, messaging, and web) of your Treo generally consume more power than its organizer features. However, if you spend a lot of time using the camera, games, media players, eBooks, or other Palm OS applications, keep an eye on the battery level and charge when necessary.
- If you don't plan to use the wireless features on your Treo for a while, you may want to turn off Wireless Mode (see page 15). You can forward calls to a different number (see page 49) or let all calls be picked up by voicemail (see page 43) if your service plan includes call forwarding or voicemail features.



We recommend that you charge your Treo for a full three hours, or until the LED turns solid green, before using it for the first time.

If the battery is fully drained, and your Treo doesn't turn on, the Treo stores your data safely for about three days. We recommend that you charge and synchronize your Treo every day, especially if you use your phone often.

If the battery is fully drained, it may take a few moments for the LED to light up while charging.



- As with any mobile phone, if you are in an area with no wireless coverage, your Treo continuously searches for a signal, which consumes power. If you cannot move to an area of better coverage, temporarily turn off Wireless Mode to conserve battery power.
- Use the keyboard backlight (see page 24) only when you need it.
- Turn down the screen brightness (see page 121).
- Decrease the Auto-off setting in General Preferences (see page 128). This turns off your screen automatically after a shorter period of inactivity.


Where to learn more



A quick introduction to your new Treo

- **Tutorial:** The Tutorial teaches you how to use many features of your Treo. It is already installed on your Treo, and you can launch it any time.

While using your Treo

- **Tips:** Many of the built-in applications include helpful tips for getting the most out of your Treo. To view these tips, launch an application, press Menu (menu), and then from the Options menu, choose Tips.
- **Information:** Many screens have an Information icon  in the upper-right corner. Tap the Information icon with your stylus to learn about the tasks you can perform on that screen.
- **Online support from palmOne:** For up-to-date downloads, troubleshooting and support information, check out www.palmOne.com/support/treo600.

 
If you need more information

- **Books:** Many books on Palm Powered devices are available in local or online book retailers (look in the computers section).
- **Online forums:** Consult online Treo user discussion groups to swap information and learn about areas you may find nowhere else.
- **Customer service from your wireless service provider:** For questions about your wireless account or features available on the network, contact your wireless service provider for the latest information and help.



To launch the built-in tutorial:

1. Press Applications Launcher.
2. Choose the pick list in the upper-right, select All.
3. Choose the Tutorial icon.
4. Follow the onscreen instructions in the Tutorial.



first week:

using phone,
web, and
messaging



Phone overview

 









The Phone application lets you make and receive calls, store information about your contacts, and store Favorites for contacting people and launching applications. Be sure you know how to turn on Wireless Mode before reading this section (see page 15).

Accessing the Phone application

- Press Phone .



The icons at the top of the Phone screen let you monitor the status of these items:

| | |
|--|---|
|  | Displays your wireless service provider's name when Wireless Mode is on and you are in your wireless service provider's coverage area. If you are outside your wireless service provider's coverage area, No Service or Roaming appears instead. No Service means that there is no coverage at all, and Roaming means that another wireless service provider's network is available. When you turn off Wireless Mode, it displays Wireless Mode is Off. |
|  | Appears when call forwarding is active. |
|  | Appears when TTY/TDD Mode is active. |
|  | Appears when you have new voicemail messages. You can tap this icon to retrieve your messages. (Not supported by all wireless networks.) |
|  | Appears when you are outside your wireless service provider's coverage area and you are roaming on another wireless service provider's network. This icon may blink if the provider is not on your wireless service provider's preferred roaming list. |
|  | Appears when Wireless Mode is on. The bars display the signal strength. The stronger the signal, the more bars appear. If you are outside a coverage area, both the tower and bars disappear. |
|  | Appears with green arrows when you are connected to a data network and transferring data. You cannot receive calls. Appears with gray arrows when you are standing by to send or receive data. You can still receive calls. |
|  | Displays the battery charge status. When the battery drains to 25% of its capacity, the icon changes from blue to red. When the battery drains to 5% of its capacity, the icon changes from red to clear. |
|  | Appears when your Treo™ 600 smartphone battery is charging. |
|  | Appears when your Treo battery is fully charged. |



To display the remaining battery power, tap the battery icon at the top of the screen.

If TTY/TDD Mode is active, you won't see the call forwarding icon.




For more information (address, company, etc.) about a person in your Contacts list, highlight the name and press Center.

You can begin a Name Lookup immediately from the Main view in the Phone application. From the Options menu, select Display Preferences. Choose the second pick list and select Typing starts Contacts search.

Dialing calls


Your Treo offers several options for making phone calls. As you become more familiar with your Treo, you'll discover which method you prefer.



Dialing with the keyboard

1. Press Phone .
2. Using the numbered keys on the keyboard, type a phone number. You do not need to press Option to access the numbers on the keyboard.
3. Press Center to dial.

Dialing by contact name


Before you can dial a call by contact name, you must create contacts (see page 50) or import them with a HotSync® operation (see page 32).

1. Press Phone .
2. Use the 5-way navigation control to access the Contacts list.
3. Using the keyboard, begin typing one of the following for the contact you want to call:
 - First initial and last name
 - First name
 - Last name
4. Choose the number you want to dial.
5. Press Center to dial.

To start another search, press Backspace  to delete letters you've entered. Or, just press Phone  to start all over.


Dialing with a Favorites button

Before you can use Favorites buttons, you must create some Favorites entries. See page 52.

1. Press Phone .
2. Use the 5-way navigation control to access your Favorites buttons.
3. Highlight the desired button.
4. Press Center to dial the selected button.

Dialing with the onscreen Dial Pad

1. Press Phone .
2. Tap the onscreen Dial Pad to enter the number.
3. Press Center to dial.

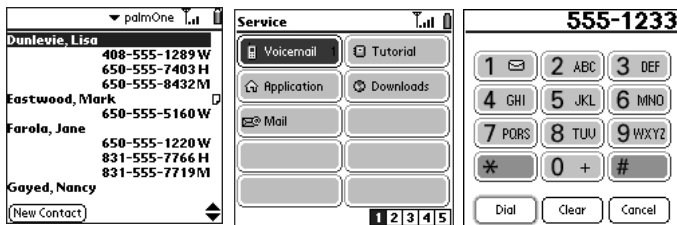

You can paste numbers directly into the Dial Pad view. Copy a number from another application, and then switch to Dial Pad view. Press Menu, and then from the Edit menu, choose Paste. Press Center to dial.



If you can't highlight and dial a phone number on a web page or in a text message using the 5-way navigation control or stylus, it means that Treo does not recognize it as a phone number.

Dialing from a web page or text message

Treo recognizes most phone numbers that appear in web pages or text messages.



1. Use the 5-way navigation control to highlight the phone number you want to dial.
2. Press Center to dial.



Redialing the last number you called

Do any of the following to redial the last number you called:

- Press Phone (☎). Then press Center to see a list of your recently dialed numbers.
- Press Phone (☎), and then press Center. Choose Dial Pad, and then choose Dial to display the last number you dialed.
- Press Phone (☎), and then press Center. Choose Call Log. This view shows all your recent calls in chronological order. Press Center to dial the last number you called.

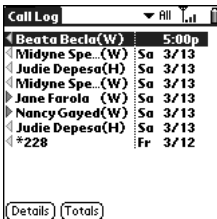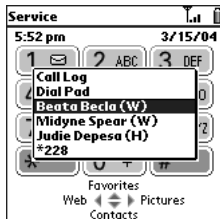


Receiving calls

To receive calls, Wireless Mode must be on. This is different from having just the screen turned on (see page 15).


To answer a call, do one of the following:

- Using the 5-way navigation control, choose the onscreen Answer button.
- If the headset is attached, press the headset button.

To ignore a call and send it to voicemail, do one of the following:

- Press Backspace .
- Using the 5-way navigation control, choose the onscreen Ignore button.

To silence the ringer while your phone is ringing:

- Press the volume buttons or any key on your Treo except the 5-way navigation control, Space, Return, or Backspace.
- To immediately silence all system sounds including the ringer, slide the ringer switch to Sound Mode Off .

When you silence the ringer, you can either answer the call or let it ring through to voicemail.

If audio (MP3 music, for example) is playing, and a call arrives, you can still hear the phone ringing softly. To answer the call, do one of the following:

- Using the 5-way navigation control, choose the onscreen Answer button.
- Press the headset button (if headset is attached).

The audio continues playing but you won't hear it during your call.



Voicemail services must be active on your account before sending a call to voicemail. Otherwise you can check the Call Log to see a missed call (if the caller's number was not blocked).

To prevent calls from accidentally being answered while the phone is in a pocket or briefcase, you can disable the touchscreen when an incoming call arrives (see page 130).


See a photo of the person calling you! Learn how to assign a caller ID picture on page 118.



Using voicemail

Setting up voicemail


If you subscribe to voicemail services, you can customize your personal options.


1. Turn on Wireless Mode, as described on page 15.
2. Press Phone .
3. Use the 5-way navigation control to access Favorites.
4. Choose the Voicemail Favorites button.
5. When you hear your outgoing message, press # to access the system prompts.
6. Follow the system prompts to customize your personal options.



Your Treo connects to your wireless service provider's automated voicemail system. If your Treo is unable to connect to the automated system, please contact your wireless service provider for assistance.


Voice mail notification

When you have new voicemail, you are notified with an alert that indicates the number of messages you have waiting. A voicemail icon  may also appear near the top of your screen (this feature is not supported by all wireless networks).

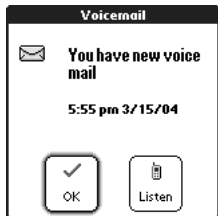

Retrieving voicemail messages

If the Voicemail alert is on your screen, you can choose that button to hear your message(s). If you've already dismissed the alert, follow these steps to retrieve your messages:

1. Press Phone .
2. From the Phone application Main view, Dial Pad, or Favorites, press and hold 1 on the keyboard. Treo dials your wireless service provider's voicemail system.
3. When you hear your outgoing message, press # to access the system prompts.
4. Enter your voicemail password using the Treo keyboard, or choose Extra Digits if you defined this option (see page 54 for information on editing Favorites buttons). Remember, you do not need to press Option to type numbers, *, or # while on an active call.



If a voicemail icon appears in the title bar at the top of the screen, you can tap this icon to retrieve your voicemail.



Managing active calls




Press Phone repeatedly to toggle between the Active Call screen and the Main view of the Phone application.

The personal speakerphone lets you use other features, such as checking your calendar, during a call.

The Extra Digits button appears only during outbound calls that you dialed with a Favorites button to numbers that include pre-defined extra digits (see page 53).

To avoid accidentally pressing onscreen buttons while you're holding the phone up to your ear to speak, you can disable the touchscreen during active calls (see page 130).

When you make or receive a call, the Active Call view appears. Use the 5-way navigation control to access the onscreen buttons in this view:

- **Hang Up All** (or pressing Backspace 

The screenshot shows the 'Service' header at the top right. Below it, the caller's name 'Bee Lewell' and number '1-650-555-5535' are displayed. To the right, the word 'Active' and the duration '00:16' are shown. At the bottom, there are five onscreen buttons: 'Hang Up All' (with an 'X' icon), 'Spkr-phone' (with a speaker icon), 'Hold' (with a double vertical bar icon), 'Dial Pad' (with a grid icon), and 'Mute' (with a microphone icon). Lines labeled A through G point to these elements: A points to the caller's name and number; B points to the duration; C points to the Hang Up All button; D points to the Spkr-phone button; E points to the Hold button; F points to the Mute button; and G points to the Dial Pad button.

- A. Caller's name and number
- B. Current duration of call
- C. Hang up immediately
- D. Switch to speakerphone
- E. Place current call on hold
- F. Mute the microphone
- G. Open Dial Pad view

More ways to manage calls


Treo offers many advanced telephone features, including call waiting, conference calling, and call forwarding.

Making a second call

You can make a second call while your first call is still active.

1. After dialing the first number, use the 5-way navigation control to choose Hold.
2. Use the navigation control to choose Add Call.
3. Dial the second number using Favorites, Contacts, Dial Pad, Call Log, or Redial list (see page 40).

The Active Call view now includes two status lines, each representing one of the calls. You can join the two calls in a three-way call, but you cannot switch between the two calls. To end both calls, choose Hang Up All.

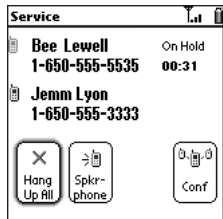

You can use nearly any other application on Treo while on an active call, including the organizer features and SMS. However, you cannot send and receive email or browse the Internet while on an active call. To return to an active call from another application, press Phone.



You cannot initiate a three-way call if the second call is incoming.

Answering a second call (call waiting)

When you are on an active call, you can receive a second call. When the second call comes in, the Call Waiting dialog appears, giving you the following options for handling the second call:

- To place the current call on hold and answer the new call, use the 5-way navigation control to choose Answer.
- To send the new call to voicemail, use the 5-way navigation control to choose Ignore.

Making a three-way call



Talk to two people at the same time with three-way calling. Normal airtime rates apply for each of the two calls.

1. Dial the first number.
2. While the first call is active, place a second call.
3. Use the 5-way navigation control to choose Conf. This joins the two calls in a three-way call.
4. Use the navigation control to choose Hang Up All and end all the calls.



Forwarding all calls

You can forward all of your calls to another telephone number. Keep in mind that additional charges might apply for forwarded calls.

1. Press Phone .
2. Press Menu .
3. From the Options menu, choose Phone Preferences (/A).



4. Choose the Forward all calls to pick list.
 - If the forwarding number appears in the pick list, select the number.
 - If the forwarding number does not appear in the pick list, select Edit Numbers, and then choose New. Enter a 10-digit forwarding number without spaces. Choose OK twice to finish.
5. Choose OK.





Managing contacts



If you have several contacts to enter, it's more efficient to use


Palm® Desktop software or Microsoft Outlook on your computer and then synchronize data between the Treo and your computer. For more information, see page 32.


In the Contacts view, Up and Down move to the previous or next Contacts record.

Be sure to label your contacts' wireless numbers correctly. The SMS application (see page 67) looks up only numbers labeled as Mobile.

Contacts is a view in the Phone application. If you are familiar with Palm Powered™ devices, you may recognize that Contacts is similar to the Address Book application on previous devices.

Adding a contact

1. Press Phone .
2. Use the 5-way navigation control to access the Contacts list.
3. Choose New Contact.

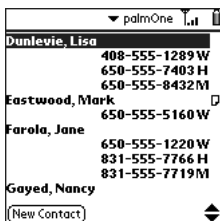

4. Use the 5-way navigation control to move between fields as you enter information.
5. To place the entry in a category or mark it private, choose Details.
6. To add a note to an entry, choose Note.
7. After you enter all the information, choose Done.



Viewing or changing contact information

1. In the Contacts list, begin typing one of the following for the contact you want to view or edit:
 - First initial and last name
 - First name
 - Last name
2. Choose the name of the entry you want to open.
3. Press Center to open the entry.
4. Choose Edit.
5. Make changes to the entry as necessary.
6. Choose Done.

Deleting a contact

1. Open the contact you want to delete.
2. Press Menu (menu).
3. From the Record menu, choose Delete Contact (/D).
4. Choose OK.

Defining your business card

1. Create a new contact with your business card information.
2. While still in Contact Edit view, press Menu (menu).
3. From the Record menu, choose Select Business Card.
4. Now you can beam your business card to other Palm OS[®] devices. From the Main or Contacts view in the Phone application, press Menu (menu). From the Record menu, choose Beam Business Card (/M).



Defining Favorites buttons



To see the next page of Favorites, press Right repeatedly. To see the previous page, press Left repeatedly.

Treo provides 50 programmable Favorites buttons for quick access to the following common tasks:


- Dialing a phone number (speed dial)
- Launching an application
- Accessing a web page
- Addressing a text message
- Accessing voicemail (preset on Treo)


Your wireless service provider may include special Favorites buttons on your Treo that are customized for their services.



You can assign a Quick Key to a Favorites button. Then from the Main, Favorites, or Dial Pad view, you can press and hold the Quick Key to launch the Favorite associated with it. Quick Keys are optional, must be letters, and are not case sensitive.

Creating a speed dial Favorites button

1. Press Phone .
2. Use the 5-way navigation control to access your Favorites buttons.
3. Choose a blank button.
4. Choose the Type pick list, and then select Speed Dial.
5. Enter a label and phone number for the Favorite by doing one of the following:
 - If the entry is for an existing contact, choose Lookup. Start typing the last name of the contact, and then select the contact when it appears in the Lookup list.
 - If the entry is for a new contact, type the Label, press Down ▼ and type the Number.
6. (Optional) Enter a Quick Key. When you are in the Phone application, you can press and hold the Quick Key to instantly launch the Favorite.
7. (Optional) Choose More, and select advanced options:
 - **Extra Digits:** Lets you define additional digits to dial, such as a password or extension.
 - **Dial Extra Digits Automatically:** Dials predefined Extra Digits two seconds after dialing the phone number, when checked. Add commas to insert more pauses.
 - **Ringtone:** Assigns a special ringtone for incoming calls from that contact.
 - **Image:** Assigns a Caller ID picture that displays when that person calls.
8. Choose OK.



Add Favorite ⓘ

Type: ▼ Speed Dial

Label: John (W) ...

Number: 14155557842

Quick Key: J... (press and hold)



More Options ⓘ

Extra Digits:

Dial Extra Digits automatically

Ringtone: ▼ Default

Image:




To see all the contact numbers for the selected person or business, highlight the Favorite button and press Space.





You can also organize your Favorite buttons on different pages. From the Edit menu, choose Edit Favorites Pages.

You cannot edit or delete the voicemail entry.

Creating an application, message, or web link Favorites button


1. Press Phone .
2. Use the 5-way navigation control to access your Favorites buttons.
3. Choose a blank button.
4. Choose the Type pick list, and then select Application, Message, or Web Link.
5. Enter a label for the Favorite, and enter any other necessary information on the screen.
6. (Optional) Enter a Quick Key that launches the Favorite when pressed and held.
7. Choose OK.

Editing or deleting an existing Favorites button

1. Press Phone .
2. Use the 5-way navigation control to access your Favorites buttons.
3. Highlight the Favorites button you want to edit or delete.
4. Press Menu .
5. From the Edit menu, choose Edit Favorites Button (/E).
6. Make the desired changes. For example, you can add a Quick Key shortcut to any Favorite. When you press and hold the assigned letter from within the Phone application, the Favorite launches.
7. To delete the entry, choose Delete.
8. Choose OK.

Using a phone headset

You can connect a phone headset for hands-free operation. If you need to use your phone while driving, and this is permitted in your area, we recommend using a phone headset.

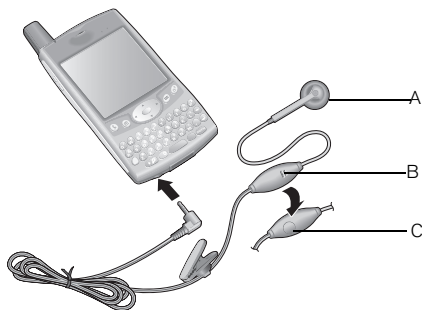

- A. Speaker
- B. Microphone
- C. Headset button

- You can press the headset button to perform any of the following tasks:
 - answer an incoming call
 - answer a call-waiting call
 - join two calls in a three-way conference
 - hang up all calls

Headset specifications

Your Treo uses a 2.5mm, 3-pin headset connector. Use only headsets with this type of connector. When in doubt, ask the third-party headset manufacturer if their product is compatible with Treo phones. If the headset buzzes or the microphone doesn't work properly, your headset may be incompatible with Treo.



In addition to the headset that came with your Treo, you can use other third-party headsets.

To hear stereo through the jack (such as music), you should use a stereo adapter or other accessory. Visit www.palmOne.com for more information.

The headset designed for previous models of Treo is not compatible with the Treo 600.



Browsing the web










If you browse to a secure web page, a Lock icon appears.

Lots of pretty graphics slowing you down? Browse the web faster by turning off images. From the Options menu, choose Preferences, and then check the Don't Show Images box.

Tap and hold the back or forward buttons to pop up a list of sites you've visited.





Blazer® web browser provides quick and easy access to web pages right on your Treo. You can view the regular sites you use today, including those with security and advanced features like JavaScript and frames. To browse the web, you must activate data services from your wireless service provider.

Viewing a web page

1. Make sure Wireless Mode is turned on, as described on page 15.
2. Press Phone .
3. Use the 5-way navigation control to choose Web.
4. Choose the Page View  icon.
5. Press Space to jump between the Web page contents and the icons at the bottom of the screen.
6. Navigate to the web page you want:
 - To view a portal of content designed specifically for your Treo, choose .
 - To go to any web page on the Internet, choose .
 - To view the previous or next page, choose  or .
 - To refresh the page with the latest content available from the Internet, choose .

Navigating in Optimized Mode

Blazer uses a patent-pending technology to optimize web pages for your Treo. By default, the browser reformats web pages into one column on your screen. This way, you can see most content without scrolling left or right.

- Press Up  or Down  to move through a web page.
- Press Left  or Right  to move between links on the page. To follow a link to another web page, highlight the link, and then press Center. You can also tap the link on the screen with your stylus.

Navigating in Wide Page Mode

Some web pages, such as maps, are easier to view without the optimization done in Optimized Mode. You may want to view these pages in Wide Page Mode. This mode presents the web page as you would expect to see it on your computer's screen.

1. Go to the page you want to view.
2. Press Menu (menu).
3. From the Page menu, choose Wide Page Mode (/W).
 - Press Up ▲, Down ▼, Left ◀, or Right ▶ to scroll through the wide page.
 - To follow a link to another web page, tap the link with your stylus.

Creating a bookmark

Bookmarks let you instantly access a web page, without typing the address every time. Blazer can store up to 100 bookmarks or saved pages, allowing you to open your favorite web pages quickly. Remember, a Blazer bookmark is different from a Favorite (see page 52).

1. Go to the page you want to bookmark.
2. Press Menu (menu).
3. From the Page menu, choose Add Bookmark (/A).



New Bookmark ⓘ

Name:
palmOne

Description:
Welcome to palmOne.com

URL: http://www.palmOne.com

Preview:
palmOne
Welcome to palm

OK Cancel

4. If desired, change the Name and Description
5. Choose OK.



Want to get to the icons faster? Press Space to jump down to the icons, or press Menu to access the commands through the menus.


Always using bookmarks? Make Bookmark View the default view when you launch the browser. From the Options menu, choose Preferences, and then select the Bookmarks icon as your Initial View.



To move a bookmark or saved page to a different slot on the current page, use the stylus to drag and drop it into another slot. To move a bookmark or saved page to a different page, drag and drop it on the corresponding page icon.


Saving a page


Blazer lets you save a page for offline viewing, so you don't need an Internet connection to view it later.

1. Go to the page you want to save.
2. Press Menu .
3. From the Page menu, choose Save Page (/S).
4. Choose OK.


Viewing bookmarks or saved pages

Bookmarks and saved pages both appear in Bookmark view. Saved pages are indicated by a small triangle in the upper-right corner of the bookmark.

1. Choose the Bookmarks view icon .
2. Choose the bookmark or saved page you want to view.

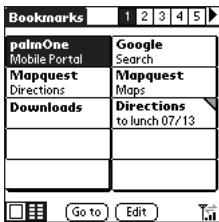

Editing or deleting a bookmark or saved page

1. From the Bookmarks view, press Menu .
2. From the Bookmarks menu, choose Edit Bookmarks.
3. Choose the bookmark you want to edit or delete.
4. Enter the desired changes.
5. Choose OK.

Arranging bookmarks and saved pages

Blazer includes 10 pages for arranging bookmarks and saved pages by topic. For example, you can store travel links on one page, stock links on another, and business links on a third page.

1. From the Bookmarks view, press Menu (menu).
2. From the Bookmarks menu, choose Edit Bookmarks.



A. Page icon

3. Type a new title for this page.
4. Use the stylus to drag and drop bookmarks into different slots on the current page.
To move a bookmark to a different page, drag and drop it on the corresponding page icon.
5. Choose OK.

Downloading files from a web page

Blazer lets you download files that are usable on your Treo, such as new applications or MIDI ringtones. When you download a file, it is automatically sent to the application that can use the file. Note: Only certain images tagged specifically for download can be downloaded by Blazer.

1. Go to the page that contains the link to the file you want to download.
2. Press Left ◀ or Right ▶ to highlight the link to the file, and then press Center to initiate the download process.



If Blazer does not recognize a phone number as dialable, you can copy the phone number (as text) and paste it into the Phone Dial Pad (see tip on page 41).


To find ringtones and software for your Treo, choose the Downloads bookmark.



Visit secure web sites. The 128-bit SSL, strong encryption lets you browse secure sites, such as online shopping, banking, and email. Remember: some secure sites also require specific browsers and may not work with Blazer.



Navigating web sites with split pages (Frames)

Some web sites split their pages into separate areas, each with their own scroll bars. You can navigate these sites more easily by “zooming in” on one of the separate areas. To do this:

1. Tap inside the area of the split page you want to make larger. Make sure you tap on an area that is not a link, otherwise, you will navigate to that link.
2. Tap the magnifying glass icon in the navigation bar . This will make the area you tapped on the entire page. Note: This icon only appears if you are on a page that is split into separate areas.

 


Copying text from a web page

You can copy text from a web page and paste it in other applications.


1. Use the stylus to highlight the text you want to copy.
2. Press Menu .
3. From the Edit menu, choose Copy (/C).
4. Go to the application in which you want to paste, and then position the cursor where you want to paste the text.
5. Press Menu .
6. From the Edit menu, choose Paste (/P).

Using the History list


The History list stores the addresses of the last 100 pages you visited. Items in the History list are sorted chronologically.


1. From the Page view, press Menu .
2. From the Page menu, choose History.
3. Press Up  to access the list, and then press Down  to navigate through the list.
4. Choose the web page you want to load.

Finding text on a web page

1. From the Page view, press Menu .
2. From the Page menu, choose Find Text on Page.
3. Type the text you want to find.
4. Check or uncheck the Wrap Search box to indicate whether you want the search to wrap from the end of the page to the beginning when the end is reached.
5. Choose Find to start the search.

Customizing your Blazer web browser settings

1. Press Menu .
2. From the Options menu, choose Preferences.
3. Set any of the following preferences:
 - **Home Page:** Sets the web page that appears when you choose the Home icon.
 - **Restore Default:** Resets the home page to the factory setting.
 - **Initial View:** Determines which view displays when you launch Blazer.
 - **Don't show images:** Selects whether you want images to appear when you load a web page. If you don't view images, web pages will load faster.

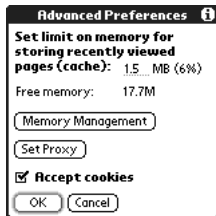

Blazer supports JavaScript, SSL, and cookies, but does not support plug-ins (Flash, Shockwave, etc.) or Java applets.


Email from a web page. Email addresses appear as links on web pages. After you configure an email application on your Treo, you can select an email address link to create a message to the selected address.



4. Choose Advanced and set any of the following preferences:
 - **Set limit on memory for storing recently viewed pages (cache):** Sets the amount of memory used for your cache. Pages are cached so they load faster the next time you view them.
 - **Memory Management:** Enables you to free up memory on your phone by clearing the memory for recent pages, history, and cookies.
 - **Set Proxy:** Sets up a proxy server to access the Internet. If your connection requires a proxy server, please contact your Internet service provider or IT administrator for this information.
 - **Accept cookies:** Allows some web sites to store personalized information on your Treo. Some sites do not work properly unless you select this option.
5. Choose OK.

Disconnecting from the Web

When you are done viewing information on the web, you can keep a dormant data connection open or you can close the connection and disconnect from the web.

1. Press Applications Launcher .
2. Choose the pick list in the upper-right corner, and then select All.
3. Choose the Prefs icon.
4. Choose the pick list in the upper-right corner, and then select Network.
5. Choose Disconnect.

Working with pictures



Your Treo comes with an easy-to-use built-in camera, which allows you to instantly take, view, and share pictures with friends and family. To add a personal touch to your phone, you can use your pictures as wallpaper on the Main Phone screen and as caller ID images (see page 118).

You can move pictures to a Windows computer by performing a HotSync operation. Pictures are 16-bit color at a maximum of 640x480 resolution (0.3 megapixels).

Taking a picture

1. Press Phone .
2. Press Right to launch Pictures.
3. Point the lens on the back of your Treo at the subject you want to photograph.
4. Press Center to capture the picture.
5. If desired, edit the picture name and category at the top of the screen.
6. Choose Save to keep the picture, choose Don't Save to discard it, or choose Send to send the picture and save it at the same time.



When using the camera in low light, you may see blue dots on the screen, especially in the darker areas. Once you capture the picture, image quality improves.

You must set up the Mail application on your phone before you can send a picture (see page 73).




To view other full-size pictures, choose Prev or Next.

You cannot send copyrighted pictures that appear with a lock icon in the Pictures view.

You can reduce the size of an image before sending it. From the Picture menu, choose Downsize. Indicate whether you want to resize the original or save a reduced copy.

Viewing a picture


1. Choose the Pictures view icon .
2. Choose the picture you want to view.
3. Choose Done.


Sending a picture

You can send a picture to friends and family by attaching it to an email message. However, you must set up the Mail application on your phone before you can send a picture (see page 73).

1. Make sure Wireless Mode is turned on, as described on page 15.
2. From the Pictures view, choose the picture you want to send.
3. Choose Send.
4. After the Mail application launches, address and send the message (see page 75).

Moving pictures


1. From the Pictures view, choose the picture you want to move.
2. Press Menu .
3. From the Picture menu, choose Move (\swarrow /M).
4. Choose the category or expansion card where you want to move the picture.
5. Choose Move to finish.

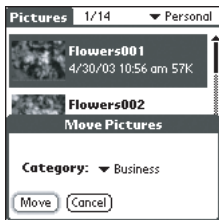


Deleting a picture

1. From the Pictures view, choose the picture you want to delete.
2. Choose Delete.
3. If prompted, choose OK to confirm deletion.

Customizing your Pictures settings

1. From any view in the Pictures application, press Menu .
2. From the Options menu, choose Preferences.
3. Set any of the following preferences:
 - **Default name:** Names a series of pictures to be captured, such as Seattle001, Seattle002, etc.
 - **Category:** The default category for newly captured pictures.
 - **Picture size:** The default size for newly captured pictures. Large is 640 x 480 pixels, small is 160 x 120 pixels.
 - **Play capture sound:** Plays a sound to confirm picture capture.
 - **Confirm before deleting:** If checked, Pictures asks if you're sure you want to delete a picture before erasing it.
 - **Confirm before saving:** If checked, Pictures asks if you're sure you want to save a picture before storing it on your Treo.
 - **Backup settings:** When activated, backs up the Treo image database on your desktop computer.
4. Choose OK.

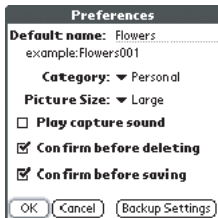

You can rename a picture. From the Picture menu, choose Edit Name.

Move or copy a picture to your SD card. Select a picture, then press Menu. From the Picture menu, choose Move, then choose your SD card from the pick list. See page 111 for more information on using expansion cards.



Viewing pictures on your computer (Windows only)


When you perform a HotSync operation, your Treo images are copied to your desktop computer. You can view these pictures in JPEG format, or email them to friends using your desktop email application.


1. Locate your Pictures folder. This is most likely at C:\Program Files\palmOne\Treo Pictures*(user name)* or if you upgraded from another Palm Powered device, at C:\Program Files\Palm\Treo Pictures*(user name)* or C:\Program Files\Handspring\Treo Pictures*(user name)*.
2. Double-click any file to view it with the default picture viewing software on your Windows computer.


SMS

Text messages are brief notes that you exchange with other mobile phones that have text messaging capability (also known as short messaging or SMS). Messages must be 140 characters or less. Refer to your service plan for per-message pricing and availability.

Creating and sending a message

1. Make sure Wireless Mode is turned on, as described on page 15.
2. Press SMS .
3. Choose New.

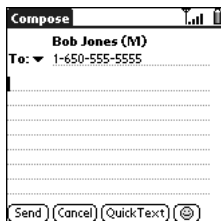

4. If the recipient is in your Contacts list, start typing the first initial and last name (no spaces). Otherwise, type the full phone number, email address, or alias.
5. Press Down . If you typed just a few letters of the recipient's name, choose the recipient's phone number or email address from the list that appears.
6. Type your message.
7. Choose Send.



When entering a message, you can insert emotive symbols by choosing Emoticons or predefined QuickText phrases. To add a new phrase, select Edit QuickText from the list.

Not all symbols available on your device may be used in text messages. The SMS application automatically replaces invalid characters before it sends your message.

You can address text messages to multiple recipients by separating the addresses with a comma. If you address a single message to three people, you will be billed for three messages.



When available, the alert and message show the sender's name and phone number. In some cases, the sender's privacy settings may block this information.

Receiving messages

When your phone is on and in an area of wireless coverage, you will automatically receive text messages sent to you. You can configure your Treo to automatically notify you when new text messages arrive, using a ringtone and vibration or simply an onscreen alert.

From the New Message alert:

- To view your message(s), choose Go To.
- To dismiss the alert, choose OK. The message goes straight to the Inbox.
- To be reminded of the new message again in 5 minutes, choose Snooze.







Using links in messages

When you receive a text message that contains a telephone number, email address, or URL, you can dial the number, send an email message, or go to the web page immediately.


1. Choose a message from the list.
2. Choose the phone number, email address, or URL (appears as underlined blue text).
3. Your Treo automatically launches the appropriate application from the link.

Managing your messages


The status icons that appear next to each message in the Inbox, Outbox, and Sent folders indicate the following:

-  An incoming message. Unread messages appear in bold; messages you've read appear in plain text. Urgent messages appear with a red exclamation point !, and low-priority messages appear with a blue arrow.
-  An item that is locked and cannot be deleted or purged until you unlock it.
-  An outbound message that is waiting to be sent or a message that was sent and has not yet been received.
-  A chat session. Chats containing unread incoming messages appear in bold text.

In list view you can rearrange the messages in any folder using the Sort command.

1. From list view, press Menu .
2. From the View menu, choose Sort by Name or Sort by Date.

In list view you can delete several messages at once from any folder using the Purge command.

1. From list view, press Menu .
2. From the Message menu, choose Purge (/K).
3. Choose the Purge pick list, and then select an option.
4. Choose OK.




If you are out of a coverage area or if Wireless Mode is off, outgoing messages go into the outbox. When you return to a coverage area, messages are sent automatically.

You cannot set the priority of outgoing messages.



Text messages can be sent and received even while you are on a phone call. This is easiest when using the hands-free headset or speakerphone.

To find a chat you had with someone, open your SMS Inbox and select a chat session.

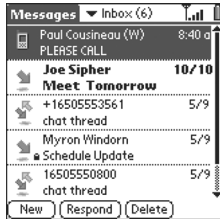

Chatting with SMS

When you exchange more than one text message with a single contact, your messages are grouped into a chat session. The upper part of the Chat view displays all messages you've exchanged with this contact, and the lower part provides a text entry area. You can carry on multiple chats at the same time and easily switch between them, using the pick list at the top of the screen.



1. From the Inbox, choose a chat.
2. Type your message.
3. Choose Send.


Customizing your SMS settings

1. Press Menu (menu).
2. From the Options menu, choose Preferences.
3. Set any of the following preferences:
 - **Messages:** Your preferences for individual text messages.
 - **Confirm message deletions:** Indicate whether you want deletion confirmation messages to appear.
 - **Return to list view after delete:** Indicate whether you want to return to the list view or the next item in the folder after deleting a message.
 - **Addressing new messages:** Indicate whether you want the keyboard to default to letters or numbers when you type an address.
 - **Message validity period:** Indicate how long you want your wireless service provider to attempt to deliver the message. If the message can't be delivered within the specified time period, the message is discarded.
 - **Chat:** Your preferences for chat sessions.
 - **Show timestamps in chats:** Indicate whether you want to see timestamps in the Chat screen.
 - **Display my name in chat window as:** Enter the name you want displayed as the label for your messages in the Chat screen.





- **Label color:** Select the color in which you want messages to appear.
- **Use color for:** Indicate whether you want to view both the message label and message in a different color, or only the name.

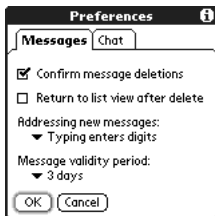

4. Choose OK.

Sending and receiving email



If you have activated data services, you're ready to set up your Treo for email. These steps differ depending on who provides your email service.

- **Mail:** The built-in email application on Treo that provides wireless access to an existing POP3 email account. See the sections that follow for details.
- **Other wireless email services:** Your wireless service provider may offer a wireless email service to which you can subscribe with your service plan. Contact your wireless service provider for details.
- **Third-party email applications:** A number of third-party developers offer Palm OS email applications. Consult the email application's documentation to learn how to set it up.

Setting up Mail

The first time you use Mail, you need to set it up on your Treo. If you have multiple email accounts, you can set up Mail to access more than one account. To use Mail, you must have:

- Wireless account with data services activated.
- Email account with an email service provider that supports the POP3 protocol. Examples include Sympatico, Earthlink, SBC, and AT&T Worldnet. Contact your email provider to determine if your account is POP3-compatible. If it is not compatible, contact your wireless service provider to learn about their corporate email solutions, or use a third-party solution.



The Mail application is compatible with regular POP3 email accounts. Other accounts, such as corporate or web-only email, require special applications, if available.



To address a message to several people, separate each address with a comma or space. When you're finished adding addresses press Center to finish.

If you receive an error when sending a message, you may need to specify an SMTP server for your email account, or add other security preferences before you can send emails. For more information, see the troubleshooting tips on page 148.

1. Press Applications Launcher.
2. Choose the Mail icon.
3. Choose the pick list, and then select your email service provider. If your email service provider is not listed, select Other.



4. Choose Next.
5. Type your Full Name (as you want it to appear when you send messages), your full Email Address, your User Name, and your Password for this account. If you're setting up a Sympatico account, enter your full email address as your User Name.
6. If you selected Other from the pick list earlier, choose the tabs for Server and Advanced, and enter the necessary information. If you do not have this information, contact your email service provider to obtain it. For SMTP, enter the regional SMTP server provided by your wireless service provider.
7. Choose OK to continue.
8. Choose Done.

Creating and sending messages

1. From the Inbox, choose New.
2. Begin typing the addressee's email address, first name, or last name. Mail remembers your most recent addressees and suggests choices. To accept a suggestion, press Down ▼. To send to a different address, keep typing the email address or name.
3. Enter the subject and message text. To move between fields, press Up ▲ or Down ▼.
4. Choose Send to connect and send all messages immediately. Or, choose Send Later to put this message into your Outbox.



Attaching ringtones and images to your messages

1. Create the message to which you want to attach the item.
2. From the New Message screen, press Menu (menu).
3. From the Options menu, choose Insert Attachment.
4. Choose the type of item you want to attach.
5. Choose the specific item you want to attach.



To send a copy or blind copy, choose Cc or Bcc, select those lines and enter the address(es) in those fields. See page 80 for details on displaying the Bcc field.

To save a message without sending, choose Cancel (instead of Save), and then choose Yes in the Save Draft screen.

You can attach other types of third-party files to an email if the third-party software supports the "Send" command. Launch the third-party application, open the item in question, press Menu, and choose "Send" if available.



You can also reply to all addressees. Choose the Respond button, and then choose Reply All.

If you want your Treo to check your email automatically, change the Delivery preference.

Attaching applications to your messages

You can create a new email with a Palm OS application attached (subject to copyright restrictions).

1. Press Applications Launcher (Ⓜ).
2. Press Menu (☰).
3. From the App menu, choose Send.
4. Choose the application you want to send. If the application has a lock icon (🔒) next to it, it is protected and can't be attached.
5. Complete the message and send.

Receiving and viewing messages

By default, your Treo automatically sends and receives messages (see page 80 for more details). You can manually send and receive messages on-demand as described below.

1. Make sure Wireless Mode is turned on (see page 15).
2. From any mailbox, choose Send and Receive.
3. From the Inbox, choose the message you want to view.
4. When viewing the message text, press Option (Ⓚ) and Left (◀) or Right (▶) to view the previous or next message.
5. Choose Done to return to the Inbox.





Replying to or forwarding messages

When you respond to messages, you can choose whether to include the original text (see page 80).

1. From the Inbox, Filed, or Deleted folder, open the message to which you want to respond.
2. From the Message view, choose Respond to reply. To reply to all or forward, choose the appropriate button.
3. Enter your reply.
4. Choose Send to finish.

Viewing attachments

There are a number of attachment types you can open with the built-in software on your Treo (e.g. ringtones, pictures). You can open other types of attachments by installing third-party applications. In Message view, attachments appear with the paperclip icon  if they are unsupported on Treo. If attachments are supported on Treo, they appear with the icon for the associated program (e.g. the camera  icon for pictures).

1. From any folder, open the message with the attachment you want to view.
2. Choose the attachment icon.
3. Follow the prompts from the viewing application.



If a large incoming message is truncated, go to the Message menu, and then choose Get Entire Message.

If you have problems receiving email, see the troubleshooting tips starting on page 148.

To hear sound file attachments, press Menu. From the Attachments menu, choose Open.




You can also use the system Find dialog to quickly scan your mailbox. Press Option and Shift/Find.



 
To empty (or purge) the Deleted folder, go to the Message menu, and then choose Empty Deleted Items (/E).

Managing your messages

The status icons that appear next to each message in your Inbox indicate the following:


 


-  You have not read the message
-  You have read the message
-  The message includes an attachment

You can rearrange the Mail list to make it easier to find and view messages.

- From the Mail list view, press Menu () , and then from the Options menu, choose one of the following: Sort by Date (/Z), Sort by Name (/Y), Sort by Subject (/J).
- To quickly switch between folders in the list view, choose the folder pick list in the upper-right corner, and then select the desired folder.

Deleting selected messages from the Inbox

When you delete a message from the Inbox, it moves to the Deleted folder which stores the 200 most recently deleted messages. If you delete more than 200 messages, the oldest messages are automatically removed from the phone.



1. Highlight the message you want to delete. To highlight a group of messages, press Shift () and Up  or Down .
2. Press Backspace (.
3. If a confirmation dialog appears, choose OK to confirm the deletion.



Deleting messages by the date

You can quickly delete a group of messages by selecting a range of dates.

1. Press Menu (**menu**).
2. From the Message menu, choose Purge (/K).
3. Choose a date range for the messages you want to delete.
4. Choose OK.
5. If a confirmation dialog appears, choose OK to confirm the deletion.

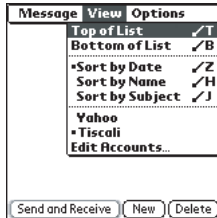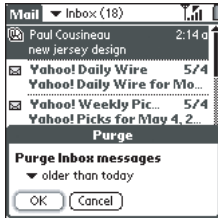

Switching accounts


- To switch between different email accounts, press Menu (**menu**), and then from the View menu, choose an account.





Remember, your Mail preferences (including automatic delivery) are set for the individual account currently displayed. If you have multiple accounts, configure each account separately.

Customizing your Mail settings

If you have multiple email accounts, you can customize the Mail settings for each individual account on your Treo. Remember, the preferences you set will only apply to the email account you are currently viewing.

1. Press Menu .
2. From the Options menu, choose Preferences.
3. Set any of the following Delivery preferences:
 - **Get mail:** Sets the interval for mail delivery. If you select an automatic delivery option, you can also select the hours during which you want automatic delivery.
 - **For each message get:** Sets the maximum size for incoming messages. 1K of information is about 4 screens of text on your Treo.
 - **Only get mail from last ## days:** Specifies the timeframe for retrieving earlier messages.
 - **Auto-deliver even when roaming:** Specifies whether you can continue automatically retrieving your email when you are not in your wireless plan's home area (which may incur additional charges on your account). This option applies only if you selected an automatic delivery option.

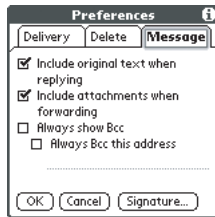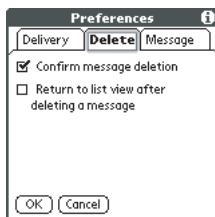

4. Choose the Delete tab and set any of the following preferences:
 - **Confirm message deletion:** Asks if you're sure you want to delete a message before erasing it.
 - **Return to list view after deleting a message:** Shows the Mail list view after you delete a message, if checked, or shows the next message in the list, if unchecked.
5. Choose the Message tab and set any of the following preferences:
 - **Include original text when replying:** Appends the full text of the original message when you reply to a message.
 - **Include attachments when forwarding:** Sends attachments as well as the original message when forwarding, even if you cannot open an attachment on Treo.
 - **Always show Bcc:** Displays the Bcc field when creating messages and allows you to pre-fill this field with a default address (useful for creating a backup copy of email that is sent to your email server).
 - **Signature:** Controls what messages have your signature automatically appended to them and lets you define a custom signature.
6. Choose OK.



If you want to access more than one email account with your Treo, choose Add Account.

If you assign Mail to an application button, you can press and hold that button to send and receive mail. This is very useful for discreet mail checking.



first two weeks:
using
organizer
features




If you have several appointments to enter, it's more efficient to use


Palm® Desktop software or Microsoft Outlook on your computer and then synchronize data between the Treo™ 600 smartphone and your computer. For more information, see page 32.

Calendar






Displaying your calendar

- Press Calendar  repeatedly to cycle through the various active views.



- Use the 5-way navigation control to move to another day, week, or month (depending on the current view).
- Choose Go or press Menu . From the Options menu, choose Go to Day (/O) choose a date from the calendar.

Creating an event

1. Press Calendar  until you are in Day view.
2. Press Left  and Right  to select the desired day.
3. Using the keyboard, type a starting time for the event. For example, type 53 for 5:30 (Remember to press Option  before typing numbers).
4. Press Down  and type the ending time for the event.
5. Choose OK.


6. Type a description for the event.



- A. Selected date
- B. Starting and ending times
- C. Selected day

Adding an alarm reminder to an event

1. In Calendar, highlight the event.
2. Choose Details.
3. Check the Alarm box and choose the number of minutes, hours, or days before the event you would like to receive the alarm.
4. Choose OK.

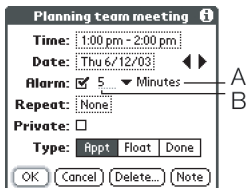

- A. Type of time units
- B. Number of time units
- C. A diamond indicates an untimed event.



The silent alarm for untimed events is defined by minutes, days, or hours before midnight of the date of the event.




When an alert occurs, the Reminder screen displays all your Treo's pending alerts. Tap an item's description to jump to that item, or check the box to clear that item.



To enter a birthday or anniversary, create an untimed event. Then, from the Details screen, choose Year as the repeat interval.

Creating an untimed event

An untimed event, such as a birthday or anniversary, does not occur at a particular time.

1. Press Calendar  until you are in Day view.
2. Press Left  and Right  to go to the date of the event.
3. Make sure nothing is highlighted.
4. Type a description for the event.



Editing or deleting an event

1. Highlight the event you want to reschedule.
2. Choose Details.
3. Change the date and time as needed, or choose Delete.
4. Choose OK.

Scheduling a repeating event

1. Create an event, and then highlight it.
2. Choose Details.
3. Choose the Repeat box, and then choose a repeat interval.
4. For weekly events, choose the day(s) the event repeats; for monthly events, choose the Day or Date option.

- If the event has an ending date, choose the End on pick list, and then select Choose Date, and select the ending date.
- Choose OK.

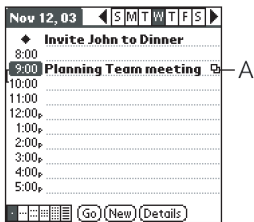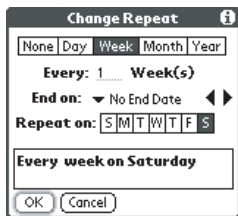

A. This icon indicates a repeating event.



Customizing general preferences for your calendar

- Press Menu (menu).
- From the Options menu, choose Preferences (/R).
- Set any of the following preferences:
 - Start Time and End Time: The beginning and end of the day shown on Calendar screens.
 - Event Duration: The default duration of a new event.
 - Week Start: The day on which the calendar week starts.
 - Initial View: The view that appears when you launch Calendar.






 
- **Button Views:** The views that appear when you press Calendar repeatedly. By default, you see Day and Month Views, but you can also see Week, Week with Text, Year, and Daily Journal Views.

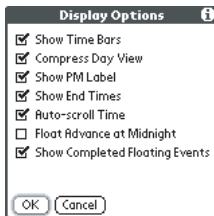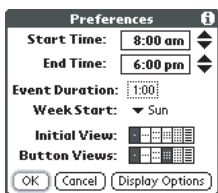


- **Display Options:** Your choices for different Calendar view options:
 - **Show Time Bars:** Shows the duration of an event and illustrates conflicts.
 - **Compress Day View:** When off, all time slots display. When on, start and end times display for each event, but blank time slots disappear to minimize scrolling.
 - **Show PM Label:** Displays a p after PM times.
 - **Show End Times:** Displays all time bars and time slots for end times of an event.
 - **Auto-scroll Time:** Displays events based on the time of day when there is more than one screen of information. The arrows at the bottom-right corner indicate more information.
 - **Float Advance at Midnight:** Advances floating events to the next day at midnight of the current day.
 - **Show Completed Floating Events:** Displays completed floating events.
4. Choose OK to close the Display options dialog.
 5. Choose OK.

Customizing To Do List preferences for your calendar

You can display To Do items in your calendar to keep on top of your tasks.

1. Press Calendar  until you are in Day view.
2. Press Menu .
3. From the Options menu, choose To Do Preferences.
4. Set any of the following preferences:

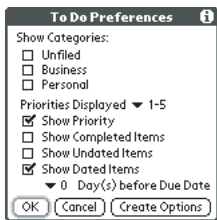

To Do Preferences ⓘ

Show Categories:

- Unfiled
- Business
- Personal

Priorities Displayed ▼ 1-5

- Show Priority
- Show Completed Items
- Show Undated Items
- Show Dated Items

▼ 0 Day(s) before Due Date

OK Cancel Create Options

- Show Categories: Determines which To Do categories appear.
 - Priorities Displayed: Limits the To Do items to certain priorities.
 - Show Priority: Displays the priority assigned to an item.
 - Show Completed Items: Displays checked off items.
 - Show Undated Items: Displays items that do not have a Due Date assigned.
 - Show Dated Items: Displays To Do items that have a Due Date assigned.
5. Choose OK.





To Do List



You can set To Do List to record the date that you completed the To Do item, and you can choose to show or hide completed items. Completed items remain in the memory of your phone until you purge them.

To save memory, you can purge all completed To Do items. From the Record menu, choose Purge. Choose OK to finish.

You can display To Do items in your calendar. See page 89 for information on customizing To Do Preferences for your calendar.

You can use To Do List as a reminder of tasks you need to complete and to keep a record of complete tasks.

Adding a To Do item

1. Press Applications Launcher (⌘).
2. Choose the pick list in the upper-right corner, and then select All.
3. Choose the To Do List icon.
4. Choose New to create a new To Do item.
5. Type the text of the To Do item. The text can be longer than one line.
6. Press Down ▼ to deselect the To Do item.





Setting item priority, due date, and other details

The Details dialog enables you to assign a priority level, due date, category, privacy flag, and note to each item.


1. Highlight the item to which you want to assign details.
2. Choose Details.

- Set any of the following:
 - Priority: Choose the Priority number for this item (1 is most important). Later you can arrange your To Do items based on the importance of each item.
 - Category: Assign the item to a specific category.
 - Due Date: Choose the Due Date pick list, and then select a due date for the item.
 - Private: Check this box to mark this item private.
 - Note: Enter additional text you want to associate with the item.
- Choose OK.

Checking off a To Do item

- Choose the item you want to check off.
- Hold Option  and press Return .

Deleting a To Do item

- Highlight the item you want to delete.
- Press Menu .
- From the Record menu, choose Delete Item (⌘D).
- Choose OK.



Press Menu to access other features such as importing phone numbers into To Do List.




To uncheck the selected item, hold Option and press Return.

If you turn on the Show Due Dates option in the To Do Preferences screen, you can tap directly on the due date in To Do List to choose a new date.

Customizing To Do List

The To Do Preferences screen enables you to control the appearance of To Do List.

1. In To Do List, choose Show.
2. Set any of the following preferences:

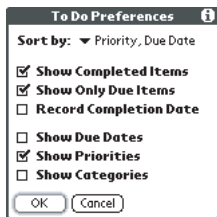


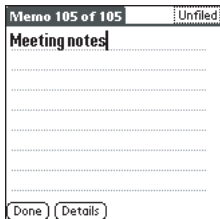
- Sort by: Indicates the order in which your To Do items appear in the list.
 - Show Completed Items: Displays items you've checked off.
 - Show Only Due Items: Hides items that are not yet due.
 - Record Complete Date: Replaces due date with the completion date when you complete (check) the item.
 - Show Due Dates: Displays item due dates, and inserts an exclamation mark next to overdue items.
 - Show Priorities: Displays the priority setting for each item.
 - Show Categories: Displays the category for each item.
3. Choose OK.

Memo Pad


Memos are a great way to store notes on your Treo.

Creating a memo

1. Press Applications Launcher .
2. Choose the pick list in the upper-right corner, and then select All.
3. Choose the Memo Pad icon.
4. Enter the text you want to appear in the memo.
5. Choose Done.



Deleting a memo

1. Choose the memo you want to delete.
2. Press Menu .
3. From the Record menu, choose Delete Item (/D).
4. Choose OK.



Each Memo Pad item can include 4,096 characters of text.

You can assign categories to Memo Pad items. Open the item you want to assign a category to, choose the pick list in the upper-right corner, and then select a category.






CityTime

The CityTime world clock displays the day and time in your home city and in four other cities around the globe. Whether you're traveling or at home, it's easy to keep track of the best time to reach your business associates, friends, and family in faraway places.

Setting your Home City

The Home City serves as a point of reference for your other city selections. The Home City time reflects the current system time (unless you have changed locations, see page 95). The information displayed for all the other cities is based on the day and time in your Home City.

1. Press Applications Launcher .
2. Choose the pick list in the upper-right corner, and then select All.
3. Choose the CityTime icon.
4. Press Menu .
5. From the Options menu, choose Select Home City (/H).
6. Choose the Home City pick list, and then select the city closest to your location (in the same time zone).
7. Choose OK.

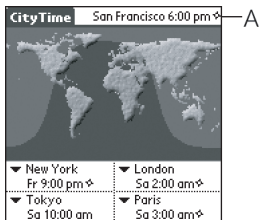

A. Home City

 
Selecting remote cities

In addition to your Home City, you can display the day and time for four other cities, called remote cities, anywhere around the globe.

1. Use the stylus to tap a pick list in the lower part of the CityTime screen, and then select the city closest to the city you want to display.
2. Choose the remaining pick lists, and then select the other three cities you want to display.


Adding cities

If the city you want to display is not in the predefined list, you can add it.

1. Press Menu .
2. From the Options menu, choose Edit Cities (/E).
3. Choose New.
4. Enter the city name and other information.
5. Choose OK.

Changing locations

If you travel, you can easily coordinate the system time on your Treo with the local time.

1. Press Menu .
2. From the Utilities menu, choose Change Location (/L).
3. Choose the To pick list, and then select your new location.
4. Choose OK.



CityTime does not automatically update the system time for Daylight Savings Time.

Run your stylus over the map to see the time in other cities.

The shadow over the map represents nighttime moving across the globe.



Calculator





You can tap the screen or use the keyboard to input numbers.

Calculator includes a basic calculator, plus an advanced calculator with scientific, financial, and conversion functions.

Switching between Basic and Advanced Calculator modes

1. Press Applications Launcher (🏠).
2. Choose the pick list in the upper-right corner, and then select All.
3. Choose the Calculator icon.
4. Press Menu (☰).
5. From the Options menu, choose Toggle Mode (/M).

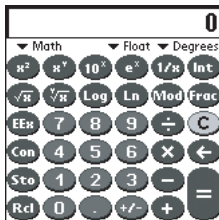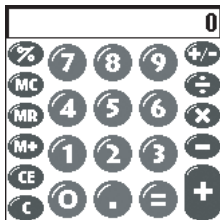

Selecting functions in Advanced Calculator mode

1. Switch to Advanced Calculator mode (see above).
2. Choose the pick list near the upper-left part of the screen, and then select the Advanced Calculator function you would like to use:
 - Math: Advanced mathematical functions such as exponents, roots, and logarithms.

- Trig: Trigonometric functions such as sine, cosine, tangent, and variants.
- Finance: Financial calculator functions such as APR and amortization.
- Logic: Hexadecimal characters in keypad, plus logic functions such as and, not, or, and xor. In place of Float/Degrees (see below), this view includes options for class (bin, oct, SDec, UDec, hex) and bits (8, 16, 32).
- Statistics: Statistical functions such as sum, factorial, and random number generator.
- Weight/Tmp: Weight and temperature conversions for metric and English values.
- Length: Length conversions for metric and English values.
- Area: Area conversions for metric, traditional, and English values.
- Volume: Volume conversions for metric and English values.



Choose Sto to store a number in one of ten memory slots. Choose Rcl to recall a stored number.

Choose Con to access a list of mathematical constants such as Avogadro's number or the speed of light.

3. Choose the pick list near the upper-middle of the screen, and then select how to display decimal values:
 - Float (Floating point): Position of decimal point varies according to calculation results.
 - Fixed(x) (Fixed point): Enter an integer for the number of decimal places to display, and then select Fixed(x) to round calculations to that decimal place.
 - Sci(x) (Scientific notation): Enter an integer for the number of decimal places to display, and then select Sci(x) to round calculations to that decimal place using scientific notation.



- Eng(x) (Engineering notation): Enter an integer for the number of decimal places to display, and then select Eng(x) to round calculations to that decimal place using engineering notation.
4. Choose the pick list near the upper-right of the screen, and then select whether you want to display numbers in degrees, radians, or grads.

Looking up contacts and other information




With the built-in search features on your Treo, you can find information quickly:

- Name Lookup: Enables you to dial your Contacts by name. It locates people's phone numbers when you're in the Contacts list.
- Find: Searches through the text in all the applications on your Treo.

Name Lookup

You can access Name Lookup directly from the Contacts list. This feature helps you locate Contacts quickly by entering just a few letters of a Contact's name.

1. Press Phone .
2. Use the 5-way navigation control to access the Contacts list.
3. From the Contacts list, enter the first few letters of the Contact you want to find.

You can enter:

- First name (joh for John) or
- Last name (smi for Smith) or
- First name initial and last name (jsm for John Smith)




To access Name Lookup in other applications, choose the Lookup button if it appears.



To search by company for a name you can't remember, open Find, and type the name of the company.

Find is not case-sensitive and it locates any word that begins with the text you enter. For example, entering plan finds planet, but not airplane.

Find searches through one screen's worth of information at a time. At first, you may see search results from one application, or several. If you don't find what you need on the first screen, choose Find More to check other applications.

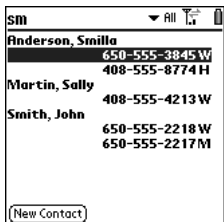



For example, entering SM displays Smilla Anderson, John Smith, and Sally Martin as shown above. Entering JSM finds only John Smith.

4. Do one of the following:
 - Highlight the contact name, and then press Center to view the contents of the record.
 - Highlight any phone number, and then press Center to dial.

Using Find

The Find feature locates any text in the built-in applications and databases, and in some third-party applications. The Find feature performs an exact search on a character string and locates any words that begin with the text you enter.

1. Press Option , and then Shift  to open the Find dialog.
2. Enter the text you want to find.
3. Choose OK to start the search.

4. In the search results, choose the text you want to review, or choose Find More to search additional applications.

Find

Matches for "birthday"

Calendar

| | |
|----------------------|--------|
| Mom's Birthday | Yearly |
| Ed's birthday | Yearly |
| Carolyn's Birthday | Yearly |
| Karen Hwa's Birthday | Yearly |
| Dad's birthday | Yearly |
| Yuko's Birthday | Yearly |
| Naoko's Birthday | Yearly |
| Yukari's Birthday | Yearly |






You can store a beamed application on your phone, or send it to an expansion card inserted in the expansion slot.

Beam your business card in two key presses: in any Phone view, press Menu press M.

Beaming information


Your Treo is equipped with an IR (infrared) port that lets you beam information to another Palm Powered™ device with an IR port. The IR port is located on the top of your Treo, between the Wireless Mode button and the ringer switch, behind the small dark shield.



Beaming a record

1. Choose the record or category you want to beam.
2. Press Menu .
3. From the Record menu, choose one of the following:
 - Beam (/B): Sends an individual record.
 - Beam Category (/Y): Sends all records in the current category.
4. When the Beam Status dialog appears, point the IR port on your Treo directly at the IR port of the receiving device.
5. Wait for the Beam Status dialog to indicate that the transfer is complete before you continue using your Treo.



Beaming an application

Not all applications can be beamed. A lock icon  appears on the Beam screen next to applications that cannot be beamed.

1. Press Applications Launcher .
2. Press Menu .
3. From the App menu, choose Beam (/B).
4. Choose the Beam From pick list, and then select whether the application you want to beam is located on your Treo or an expansion card.
5. Choose the application you want to transfer.
6. Choose Beam.
7. When the Beam Status dialog appears, point the IR port on your Treo directly at the IR port of the receiving device.
8. Wait for the Beam Status dialog to indicate that the transfer is complete before you continue using your Treo.



For best results, the path between the two devices must be clear of obstacles, and both devices must be kept stationary. If you have difficulty beaming, shorten the distance and avoid bright sunlight.

If you do not choose a category upon receiving a beamed item, the item is placed in the Unfiled category.

If you can't receive beamed information, try a soft reset (see page 139).



Receiving beamed information

1. Turn on your screen.
2. Point the IR port on your Treo directly at the IR port of the transmitting device to open the Beam Status dialog.
3. When the Beam dialog appears, choose a category for the entry.
4. Press Up ▲ to receive the beam or press Down ▼ to refuse it.

first month:

managing applications



Installing applications



On a Windows computer, you can also access the Install Tool dialog by selecting Install Tool under palmOne™ on the Start menu or from the Programs folder.


Your Treo™ 600 smartphone comes with several built-in applications that are ready to use. You can also install third-party Palm OS® applications, such as business software, games, and more. To learn more, go to www.palmOne.com/software.

When you download an application to your computer, it is probably in a compressed format such as a .zip or .sit file. If the file is compressed, you need to use a decompression utility on your computer before you install the application on your Treo.


These instructions tell you how to install basic .prc (Palm OS application) and .pdb (Palm OS database) files onto your Treo. Some Palm OS software uses an installer or wizard to guide you through the process. Consult the documentation that came with the software for details.

Installing applications from a Windows computer

1. Double-click the .prc or .pdb file you want to install on your Treo.
2. A dialog may appear with a User drop-down list. Select your User Name from the list.
3. The Install Tool window appears. If you would like to install additional files, simply drag and drop them into the space in this window.
4. If you want to install an application to an expansion card, click Change Destination. Click the arrows to move the application to the expansion card pane, and then click OK.
5. Click Done.
6. Perform a HotSync® operation to install the application(s) on your Treo.

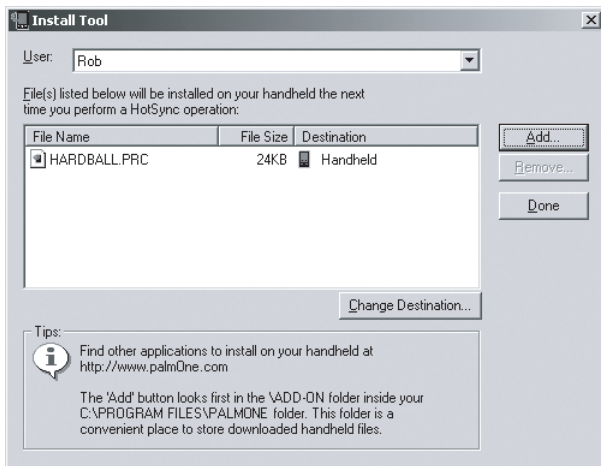

Before you can install an application on your Treo, you need to have Palm® Desktop software installed on your computer (see page 31).

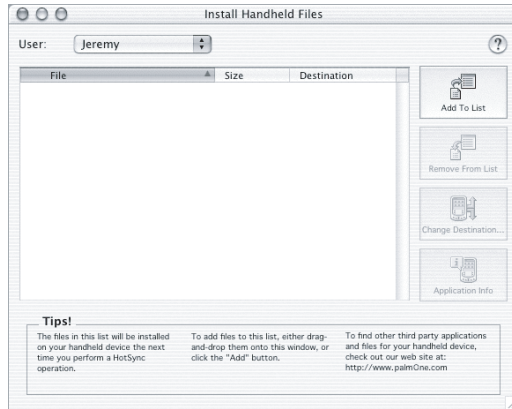

Installing applications from a Macintosh computer

1. On your Macintosh, launch Palm Desktop.
2. From the HotSync menu, choose Install Handheld Files.
3. Select the User Name that corresponds to your Treo phone from the User drop-down menu.
4. Click Add To List.
5. Locate the .prc or .pdb file you want to install on your Treo. Highlight it and click Add File.
6. Perform a HotSync operation to install the application(s) on your Treo.

Getting help with third-party applications

If you encounter a problem (such as an error message) with a third-party application, contact the application's author or vendor. For general troubleshooting of third-party applications, see page 153.



Removing applications



If you decide that you no longer need an application, or want to free up memory on your Treo, you can remove applications from your Treo or an expansion card (for more on expansion cards, see page 111). You can remove only applications, patches, and extensions that you install; you cannot remove the built-in applications that reside in the ROM portion of your Treo.



Some applications are factory-installed in your phone and cannot be deleted. These are listed with a lock icon next to them.

1. Press Applications Launcher .
2. Press Menu .
3. From the Options menu, choose Delete (/D).
4. If you want to remove an application from an expansion card, insert the card into your Treo.
5. Choose the Delete From pick list, and then select the location of the application you want to remove.
6. Choose the application that you want to remove.
7. Choose Delete to finish.
8. Perform a HotSync operation to remove the application from the Backup folder on your computer.

If you upgraded from a previous version of Palm Desktop software, your backup folder may be located in the Palm folder.

Applications deleted from your phone are kept on your computer, in the Archive folder of your user folder.





If the application re-appears on your device, you may need to manually delete it from your computer. Locate your Backup folder on your computer (Windows: C:\Program Files\palmOne\user name; Macintosh: Mac HD\Applications\palmOne\Users\user name). If you find a .prc or .pdb file for the application you just removed, delete the file from the Backup folder.



Using Application Info

The Info screens display basic statistics about the applications on your Treo.

1. Press Applications Launcher .
2. Press Menu .
3. From the App menu, choose Info.
4. At the bottom of the screen, choose the type of information you want to view:
 - **Version:** The version numbers of applications on your Treo.
 - **Size:** The size (in kilobytes) of applications and data on your Treo.
 - **Records:** The number of records in different applications on your Treo.
5. Choose Done.



Using expansion cards

The expansion slot on your Treo enables you to add Secure Digital (SD) cards and MultiMedia Cards (MMC) to extend the storage capacity of your Treo. For example, SD or MMC expansion cards can store:

- pictures
- MP3 audio files
- games
- eBooks
- applications
- databases
- ... and more

Although expansion cards are sold separately, your Treo includes a mock, non-functional card inside the expansion slot. When you're not using a functioning card, reinsert the mock card that came with your Treo to protect the expansion slot opening and to keep the slot clean.

Inserting and removing expansion cards

1. Press down and release the mock card.
2. After the expansion slot ejects the mock card, remove the card from the slot.



Many SD cards are faster than MMC cards for reading and writing data.

Warranty does not cover damage by Secure Digital (SD) cards that do not meet SD Memory Card Specifications. SD cards that do not meet SD Memory Card Specifications may damage Treo 600.






When you insert an expansion card, the card name appears as a category with a card icon next to the name. To switch between the applications on the expansion card and your phone, choose the category pick list in the upper-right corner, and then select another category.

To run an application on an expansion card, you must have enough free space in the internal memory of your Treo to accommodate the program.



3. Hold your Treo with the screen facing you, and the card with the notch in the lower-right corner next to the camera lens.
4. Insert the card into the expansion slot until you feel the card lock into place and hear the confirmation tone.

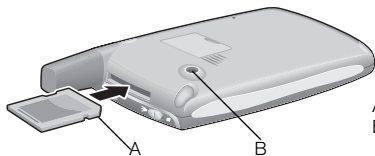


- A. Notch
- B. Camera lens

Launching applications on an expansion card

After you insert an expansion card in the expansion slot, you can launch any of the applications stored on the expansion card.

1. Insert the expansion card into the expansion slot. The Applications Launcher automatically appears.
2. Choose the icon for the application you want to launch.
3. Press Center to launch the application.

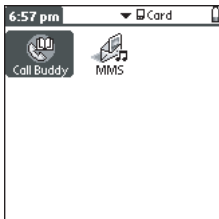


Before you copy an application to an expansion card, make sure that it is compatible with Palm OS version 5.2 or higher. Some applications do not work with expansion cards and do not allow you to store data files in a location that is separate from the application.

Copying applications to an expansion card

You can copy applications between your Treo and your expansion card.

1. Press Applications Launcher (⌘).
2. Press Menu (menu).
3. From the App menu, choose Copy (C).
4. Choose the Copy To pick list, and then select the destination: card name or Phone.
5. Choose the From pick list, and then select the location of the application you want to copy: card name or Phone.
6. Highlight the application you want to copy.
7. Choose Copy to finish.

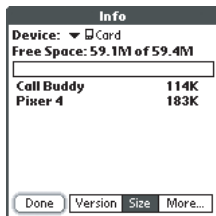



Viewing expansion card information

The Card Info application displays general information about the expansion card that is currently in the expansion slot

1. Press Applications Launcher (⌘).
2. Choose the pick list in the upper-right corner, and then select All.
3. Choose the Card Info icon.

Renaming an expansion card

If you change the contents of an expansion card, you may want to rename the card to better match its contents.

1. Insert the expansion card into the expansion slot. The Applications Launcher automatically appears.
2. Choose the Card Info icon.
3. Press Menu (⌘).
4. From the Card menu, choose Rename Card (⌘R).
5. Type a new name for the card.
6. Choose OK.

Formatting an expansion card

Formatting an expansion card is similar to formatting a disk on a computer. When you format an expansion card, you erase all the data stored on the card.

1. Insert the expansion card into the expansion slot. The Applications Launcher automatically appears.
2. Choose the pick list in the upper-right corner, and then select All.
3. Choose the Card Info icon.
4. Press Menu (⌘).
5. From the Card menu, choose Format Card (⌘F).
6. Type a new name for the card.
7. Choose OK.

when you're ready:
customizing
your Treo™
smartphone



Phone settings




You can also adjust the ringer volume by pressing the volume buttons when you're not on an active call.

Want more ringtones? You can download them from the web to your phone (see page 59).

Selecting ringtones and messaging alert tones

You can set different tones and volumes for incoming phone calls, Calendar alarms, and Mail, and SMS messaging alerts.

1. Press Applications Launcher .
2. Choose the pick list in the upper-right corner, and then select All.
3. Choose the Prefs icon.
4. Choose the pick list in the upper-right corner, and then select Sound.
5. Choose the Application pick list select, and then Phone, Mail, Calendar, or SMS.
6. Choose the Volume box.
7. Choose each pick list, and then select an alert volume.
8. Choose the Tones box.
9. Depending on the application, select alert tones from the pick lists that appear:
 - **Phone**
 - **Known Caller Tone:** An incoming call from someone in your Contacts or Favorites.
 - **Unknown Caller Tone:** An incoming call from someone identified by Caller ID who is not in your Contacts or Favorites.
 - **Roaming Tone:** A special tone for incoming calls when you're outside your home wireless network.
 - **Voicemail Tone:** A new voicemail.
 - **Service Tone:** A warning of a service change, such as moving into and out of a wireless network coverage area.



- Mail
 - Message Tone: A message arrives with automatic delivery.
- Calendar
 - Alarm Sound: The tone played the first time your alarm goes off.
 - Reminder Sound: The tone played if an alarm is not acknowledged and the alarm repeats.
 - Play Sound: The number of times an alert tone will play during the alarm sequence.
 - Repeat Alarm: The number of times the alarm repeats if not acknowledged.
 - Every: The interval between alarm repeats if not acknowledged.
 - Alarm Preset: A default for the number of minutes, hours, or days before the event that the alarm goes off.
- SMS
 - Message Tone: A new text message arrives.



You can also record, preview, send, and delete sounds on your phone. Press Applications Launcher, and then choose the Sounds icon. Choose New, Play, Send, or Edit.



If you prefer to use the onscreen Dial Pad, assign the Dial Pad as the default wallpaper.

If you remove the Dial Pad as the wallpaper, you can still access it quickly. Press Phone, and then press Center.

Adjusting call volume

While on an active call, or while using the personal speakerphone, press the volume buttons on the side of your Treo™ 600 smartphone to adjust call volume.

Assigning a caller ID picture and ringtone



1. Press Phone (☎).
2. Press Up ▲ to access your Favorites buttons.
3. Highlight the Favorites button you want to give a picture caller ID.
4. Press Menu (menu).
5. From the Edit menu, choose Edit Favorites Button (⌘/E).
6. Choose More.



7. Check the Image box, and then choose Select Image.
8. Choose the picture you want to assign to the selected Favorites button.
9. Choose Select.
10. Choose the ringtone pick list, and then select a caller ID ringtone.
11. Choose OK.

Choosing wallpaper for the Phone screen

If you have images stored on your Treo, you can select different wallpaper for the Main view in the Phone application.

1. Press Phone .
2. Press Menu .
3. From the Options menu, choose Display Preferences.
4. Choose the pick list at the top of the screen, and then select Show Wallpaper.
5. Choose the current wallpaper image, and then choose a wallpaper image for your Phone screen.
6. Choose Select.
7. OK.





System Sound settings



If the ringer switch is set to no sound, the ringer setting overrides the sound settings and all sounds are turned off.


Your Treo includes a silent alarm that can vibrate even when the ringer switch is set to Sound Mode Off.

You can immediately silence all sounds on your Treo, including phone ringtones, Calendar alerts, and system sounds. This does not mute the speaker on your Treo during a phone call.

1. Slide the ringer switch to Sound Mode Off.
2. To hear all sounds again, slide the ringer switch to Sound Mode On.

When you slide the ringer switch back to the Sound Mode On position, it restores the previous sound settings. For example, if the Phone ring volume is set to 7 and you slide the ringer switch to Sound Mode Off, you will not hear the phone ring.

When you move the ringer switch back to Sound Mode On, the Phone ring volume is still set to 7.

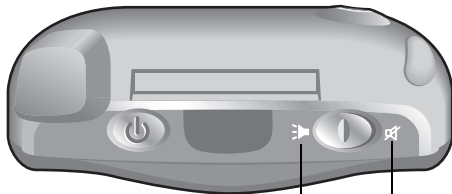


 


- A. Sound Mode On
- B. Sound Mode Off

Display and appearance










Turning the keyboard backlight on and off

- To turn the keyboard backlight on, press Option , and the . The backlight illuminates the keys, and the screen dims slightly.
- To turn the keyboard backlight off, press Option , and then  again.


Adjusting the contrast and brightness

Depending on the lighting conditions where you're using your Treo, you may need to adjust the screen contrast and brightness.

1. Press Applications Launcher .
2. Choose the pick list in the upper-right corner, and then select All.
3. Choose the Prefs icon.
4. Choose the pick list in the upper-right corner, and then select Display.
5. Choose the slider , and use Left  and Right  to adjust contrast.
6. Choose the  slider, and use Left  and Right  to adjust brightness.

Changing the screen font

You can change the font in Calendar, Contacts, Memo Pad, SMS, and To Do List.

1. Launch the application in which you want to change the font.
2. Press Menu .
3. From the Options menu, choose Font (/F).



The backlight turns off if the keyboard is not in use.

Reducing the contrast and brightness settings can help conserve battery power.



4. Choose a font style:




- A. Small font
- B. Small bold font
- C. Large font
- D. Large bold font


5. Choose OK.

Aligning the touchscreen

If you tap the touchscreen and your Treo doesn't respond accurately or activates the wrong feature, you may need to realign your touchscreen.

1. Press Applications Launcher .
2. Choose the pick list in the upper-right corner, and then select All.
3. Choose the Prefs icon.
4. Choose the pick list in the upper-right corner, and then select Touchscreen.
5. Follow the onscreen instructions.

Changing the system color scheme

1. Press Applications Launcher .
2. Choose the pick list in the upper-right corner, and then select All.
3. Choose the Prefs icon.
4. Choose the pick list in the upper-right corner, and then select General.
5. Choose the Colors pick list, and then select a color scheme.

Applications Launcher settings



Arranging applications by category

You can assign an application to a category and then display a specific category of applications in the Applications Launcher.

1. Press Applications Launcher (Ⓜ).
2. Press Menu (menu).
3. From the App menu, choose Category (Y).



4. Choose the pick list next to each application, and then select a category.
5. Choose Done.

Displaying applications by category

Do one of the following:

- Press Applications Launcher (Ⓜ) repeatedly to cycle through the categories.
- Choose the pick list in the upper-right corner, and then select a category.



The Applications Launcher displays each application as an icon. To view them as a list instead:

1. Press Applications Launcher.
2. Press Menu.
3. From the Options menu, choose Preferences (R).
4. Choose the View By pick list, and then select List.
5. Choose OK.

To create a new category, choose the category pick list, and then select Edit Categories. Choose New, and then enter the category name. Choose OK to close the dialog, and then choose OK.



You can also pick an application to launch from the HotSync® button on the cable.


To restore all of the buttons and key combinations to their factory settings, and then choose Default.


If you install a new Email, Messaging, or Browser application on your Treo, it appears in the default application pick lists if the application supports this feature. Some third-party applications automatically assign themselves to a particular button. For example, email applications typically take over the SMS button.

Button settings

Buttons Preferences

You can use Buttons Preferences to choose which applications are associated with the buttons on your Treo.


1. Press Applications Launcher .
2. Choose the pick list in the upper-right corner, and then select All.
3. Choose the Prefs icon.
4. Choose the pick list in the upper-right corner, and then select Buttons.
5. Choose the pick list next to the button or key combination you want to reassign, and then select an application.

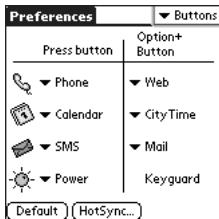

Setting default applications

Some applications look for other applications to handle data (for example, a mail application might launch a browser when you choose a link in an email message).

1. Press Applications Launcher (Ⓜ).
2. Choose the pick list in the upper right corner, and then select All.
3. Choose the Prefs icon.
4. Choose the pick list in the upper-right corner, and then select Default Apps.
5. Choose each pick list, and then select the application you want to associate with that function.

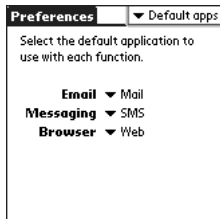


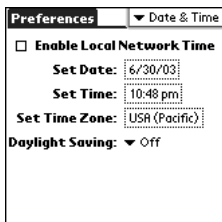


Date and time settings

Setting the date and time


You can use Date & Time Preferences to set the time, date, time zone, and daylight savings setting for your Treo. By default, your phone synchronizes the date and time with your wireless service provider's network when Wireless Mode is on and you're inside a coverage area. To manually set the date and time, follow these steps:


1. Press Applications Launcher .
2. Choose the pick list in the upper-right corner, and then select All.
3. Choose the Prefs icon.
4. Choose the pick list in the upper-right corner, and then select Date & Time.
5. Uncheck the Enable Local Network Time box.
6. Choose the Set Date box. Highlight the current year, month, and date, and then press Center to set the date.
7. Choose the Set Time box. Using the stylus, tap the up and down arrows to select the current time, and then choose OK to set the time.
8. Choose the Set Time Zone box. Choose the time zone for your location, and then choose OK.
9. Choose the Daylight Saving pick list, and then select On or Off.



Setting date and time formats

You can use Formats Preferences to choose number conventions based on geographic regions. For example, in the United Kingdom, time is expressed using a 24-hour clock. In the United States, time is expressed using a 12-hour clock with an AM or PM suffix. All the built-in applications on your Treo use the Format Preferences settings.

1. Press Applications Launcher .
2. Choose the pick list in the upper-right corner, and then select All.
3. Choose the Prefs icon.
4. Choose the pick list in the upper-right corner, and then select Formats.
5. Set any of the following preferences:
 - **Preset to:** The standard number conventions for your country. When you select a country, the other Formats Preferences are automatically set to that country's conventions. You can also edit each option individually.
 - **Time:** The time format. Select HH:MM to display a 24-hour clock.
 - **Date:** The date format.
 - **Week starts:** The first day of the week (usually Sunday or Monday).
6. **Numbers:** The format for numbers with decimal points and commas.

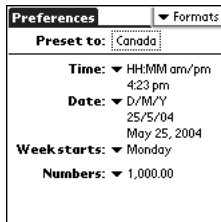

| Preferences | ▼ Formats |
|--------------------|------------------------------------|
| Preset to: | Canada |
| Time: | ▼ HH:MM am/pm 4:23 pm |
| Date: | ▼ D/M/Y 25/5/04 May 25, 2004 |
| Weekstarts: | ▼ Monday |
| Numbers: | ▼ 1,000.00 |



The Week starts setting controls the Day, Week, Month, Year, and List views in Calendar and all other aspects of your phone that display a calendar.




The Auto-off setting conserves battery power by turning off your phone's screen. It does not turn off Wireless Mode so you can still receive calls, email, and text messages after the automatic shutoff period.

The system and game volume settings apply when the ringer switch is set to the on position.

General Preferences

You can use General Preferences to set the auto shutoff interval, the beam receive feature, sounds, and screen colors for your Treo.

1. Press Applications Launcher (ⓘ).
2. Choose the pick list in the upper-right corner, and then select All.
3. Choose the Prefs icon.
4. Choose the pick list in the upper-right corner, and then select General.

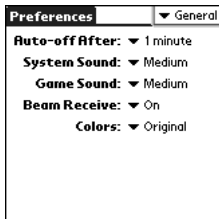

5. Set any of the following preferences:
 - **Auto-off After:** The time that elapses before your screen turns off automatically.
 - **System Sound:** The volume for system beeps and alerts.
 - **Game Sound:** The volume for game sounds.
 - **Beam Receive:** The setting that determines if your Treo can receive beamed information.
 - **Colors:** The set of predefined colors for the system display.

Locking your phone and data





Your Treo includes several features that help you protect your phone from inadvertent use and keep your data private. The built-in security software enables you to use your Treo for emergency calls even if the handset is locked.

- **Keyguard:** Manually disables all buttons and the touchscreen to prevent them from being pressed accidentally in your briefcase or pocket.
- **Auto-Keyguard and touchscreen lockout:** Automatically enables Keyguard after a period of inactivity, and lets you disable the touchscreen during an active call or call alert.
- **Phone Lock:** Requires a password to make calls with your phone.
- **System password lock:** Requires a password to see any data on your Treo.
- **Private records:** Masks or hides items marked as private, and requires a password to view them.

Keyguard

Your Treo includes a feature that locks the keyboard, so that screen items and buttons aren't accidentally pressed while the phone is in a pocket or bag.

1. With the Treo screen on, press Option  and the Screen  button to enable Keyguard.
2. To disable Keyguard, press Center.




When you receive or make a call, the touchscreen on the Active call screen may be automatically disabled to prevent accidental termination of a call. You must use the 5-way navigation control to access the buttons on the Active call screen. Check the Keyguard settings in Preferences.



To change your password, choose the Password box, enter your current password, and then enter the new password. To delete your password, choose the Password box, and then choose Unassign.



Auto-Keyguard and touchscreen lockout

Auto-Keyguard lets you automatically lock the keyboard after a period of inactivity.

1. Press Applications Launcher .
2. Choose the pick list in the upper-right corner, and then select All.
3. Choose the Prefs icon.
4. Choose the pick list in the upper-right corner, and then select Keyguard.
5. Set any of the following preferences:
 - **Auto-Keyguard:** The period of inactivity that passes before the keyboard automatically locks.
 - **Disable touchscreen when:** The conditions in which the touchscreen disables.

Phone Lock


You can lock your phone to prevent unauthorized use of your wireless account. When your phone is locked, you must enter the correct Lock Code to make calls. You can, however, still place emergency calls when your phone is locked, and you can also receive calls.

1. Press Phone .
2. Press Menu .
3. From the Options menu, choose Phone Lock (/L).
4. Choose one of the following Lock Wireless Mode options:
 - **On Wireless Mode power off:** Locks your phone each time you turn off Wireless Mode. When this setting is active, you must enter your lock code each time you turn Wireless Mode on again.
 - **Immediately:** Locks your phone when you choose OK. The next time you turn Wireless Mode on you must enter your lock code. After that, you can turn Wireless Mode on again without entering your lock code.

- When prompted, enter the current Lock Code and choose OK. Unless you changed your Lock Code, enter the **default Lock code**, which is the **last four digits** of your phone number.
- If you want to change the Lock Code, choose Change Lock Code, enter a new Lock Code, and then choose OK to accept it. Repeat this step to verify the new Lock Code.
- Choose Advanced to specify three emergency numbers that you can dial even when your phone is locked.

System password lock

You can protect your personal information by locking the system so that a password is required to access any data or use other features of your Treo.

- Press Applications Launcher .
- Choose the pick list in the upper-right corner, and then select All.
- Choose the Security icon.
- Choose the Password box.
- Assign a password and a password hint to your Treo.
- Choose the Auto Lock Handheld box.
- When prompted, enter your password.
- Choose one of the following options:
 - Never:** Prevents your Treo from locking automatically.
 - On power off:** Locks your Treo when you turn off the screen, or when it shuts off with the auto-off feature.
 - At a preset time:** Locks your Treo at a specific time of day.
 - After a preset delay:** Locks your Treo after a period of inactivity.




Important: If you lock your system, you must enter the exact password to unlock it. If you forget the password, you need to perform a hard reset to use your phone. Performing a hard reset deletes all the records in your phone (see page 140). However, you can restore all previously synchronized data at the next HotSync operation (see page 32).

To lock your system manually, choose Lock & Turn Off, and then choose Off & Lock.




Setting Owner Preferences

You can use Owner Preferences to record information such as your name, company name, and phone number. If you lock your keyboard, the Owner Preferences information appears on the screen that requests your password to unlock it, and you must also enter your password to change the Owner Preferences information.

1. Press Applications Launcher .
2. Choose the pick list in the upper-right corner, and then select All.
3. Choose the Prefs icon.
4. Choose the pick list in the upper-right corner, and then select Owner.
5. If you assigned a password with the Security application, choose Unlock, enter your password, and then choose OK to continue.

6. Type the text that you want to appear in the Owner Preferences screen.

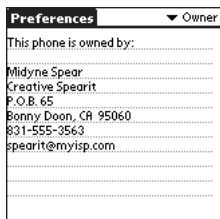


The screenshot shows a 'Preferences' window with a dropdown menu set to 'Owner'. The text 'This phone is owned by:' is followed by a list of contact details: Midyne Spear, Creative Spearit, P.O.B. 65, Bonny Doon, CA 95060, 831-555-3563, and spearit@mysp.com. There are several empty dotted lines below the contact information.

Private records

In most applications you can mark individual entries as private. All private entries remain visible and accessible until you select the Security setting to hide or mask them. When you hide entries, they do not appear anywhere in the application. When you mask entries, a visual placeholder appears in place of the entry. If you define a password, you must enter it to display private entries. If you do not define a password, you (or anyone else) can reveal private entries without a password.

1. Display the entry that you want to mark private.
2. Choose Details.
3. Check the Private box.
4. Choose OK.

Hiding or masking all private records

1. Make sure the records you want to mask are marked private.
2. Press Applications Launcher .
3. Choose the pick list in the upper-right corner, and then select All.
4. Choose the Security icon.
5. Choose the Current Privacy pick list, and then select either Hide Records or Mask Records.



As a security measure, masked Contacts records are temporarily hidden when you perform a search. So you will not see a placeholder for masked entries when viewing the results of a Lookup or Find request.



Viewing all private records

1. Make sure the records you want to mask are marked private.
2. Press Applications Launcher (⌘).
3. Choose the pick list in the upper-right corner, and then select All.
4. Choose the Security icon.
5. Choose the Current Privacy pick list, and then select Show Records.
6. If the Show Private Records dialog appears, enter your password; then choose OK.

Viewing private entries in a specific application

1. Launch the application that contains the private entries you want to display.
2. Press Menu (⌘).
3. From the Options menu, choose Security (/H).
4. Choose the Current Privacy pick list, and then select Show Records.
5. Choose OK.

Security and Palm[®] Desktop (Windows)

Palm Desktop for Windows observes the security password for your Treo. If you forget your Treo password, you cannot view your data in Palm Desktop. You can change your password, but all records marked as Private will be deleted. You can restore these records at the next HotSync operation.

1. Press Applications Launcher (⌘).
2. Choose the pick list in the upper-right corner, and then select All.
3. Choose the Security icon.
4. Choose the Password box.
5. Choose the Lost Password box.
6. Choose Yes.

If you want additional security for Palm Desktop files, you can purchase a third-party solution.

if something happens:
help



Upgrading from a Palm Powered™ device










Always use the same language for your Treo and your desktop software. Otherwise, you may lose data.

To transfer all compatible applications and data from your previous device to your new Treo™ 600 smartphone:

1. Perform a HotSync® operation with your old device and your old desktop software to back up your data one last time.
2. Install Palm® Desktop software from the CD that came with your Treo (see page 31). During the installation process, perform a HotSync operation with your new Treo. When prompted to choose a user name for your new Treo, be sure to select the existing user name for your old device.
3. Some third-party applications may be quarantined by HotSync Manager because they are not compatible with the Palm OS® 5.2 on your Treo. Do not manually install any quarantined files (see the documentation that came with the third-party applications for more information).
4. If you plan to continue using your old device, perform a hard reset (see page 139) to remove its associated user name. Each device you synchronize with your computer must have a unique name. The next time you synchronize with your old device, be sure to assign it a new user name.

After upgrading, there are a few things you need to know about your new Treo:

- **Address Book:** This application is now called Contacts. To launch Contacts, press Phone , and then use the 5-way navigation control to choose Contacts.
- **Date Book+:** This application is now called Calendar. To access this application, press Calendar .

- **Applications Launcher:** Some previous Palm Powered™ devices called this the Home screen. To access this screen, press Applications Launcher .
- **Find:** Some previous Palm Powered devices launched this global search engine by tapping the magnifying glass icon in the Graffiti® area. Now you can access it by pressing Option  and Shift  together.
- **Menu commands:** Users familiar with Graffiti menu commands can now access system menus by pressing Menu  (see page 22).
- **Backlight:** Treo includes a keyboard backlight that also dims the screen slightly for low light conditions. While your Treo screen is on, press Option , and then P to turn on the keyboard backlight.
- **Center button:** If you used an earlier model Treo, you might be accustomed to pressing Spacebar to activate commands or dial numbers. With this Treo, we recommend pressing Center instead.
- **Screen button:** The fourth button on the right is used to control the screen and is not an application button. However, you can remap this button to your favorite application (see page 124).
- **Internet connection:** This Treo was designed to work on high-speed wireless data networks. When you sign up for a high speed wireless data account, these settings are automatically configured on your Treo.
- **5-way navigation compatibility:** Some Palm OS 5 applications are optimized for 5-way navigation on devices other than Treo. Therefore you may notice inconsistencies with software that is not optimized for Treo.



To access a menu shortcut, press Menu, and then press the letter for the shortcut.

Some third-party utilities allow you to back up your old device's data onto an SD™ or MMC™ card, and then transfer the data to your Treo. We do not recommend this method because any incompatible applications are also transferred to your Treo.



Trouble installing Palm Desktop?

The CD included with your Treo installs the software and drivers that let you synchronize with Palm Desktop software or Microsoft Outlook for Windows. If you want to synchronize with a different Personal Information Manager (PIM), you must install a third-party solution. Contact the PIM's author or vendor to learn if software is available for your Treo.

1. Restart your computer.
2. Quit any active applications, including virus scanners and Internet security applications.
3. Make sure you're installing the version of Palm Desktop software that came on the CD with your Treo. Other versions of Palm Desktop software may not work with this Treo.
4. Make sure your computer profile includes administrator rights to install software. In large organizations, these are usually granted by the system administrator.

Resetting your Treo

???

Soft reset

A soft reset is similar to restarting a computer. If your Treo is not responding or you have trouble synchronizing with your computer, a soft reset may help. Unless your battery is extremely low, a soft reset should not affect your data.

1. Unscrew the stylus tip to access the reset tool.
2. Use the reset tool to gently press the reset button on the back of your Treo.



If you need to perform a system reset and disable conflicting applications, always end the process with a soft reset. This returns your Treo to normal operation.

System reset

A system reset, also called a safe or warm reset, tells your Treo to stop what it's doing and start over again without loading any system extras. If your Treo loops or freezes during a soft reset, a system reset may help. Performing a system reset allows you to get out of an endless loop so that you can uninstall the third-party application that caused the loop. Unless your battery is extremely low, a system reset should not affect your data.



1. Unscrew the stylus tip to access the reset tool.
2. While holding Up ▲, use the reset tool to gently press the reset button on the back of your Treo.
3. When the Palm Powered logo appears, release Up ▲.

Hard reset

A hard reset erases all data and third-party software on your Treo. Never perform a hard reset without first trying a soft and system reset. You can restore previously synchronized data with the next HotSync operation.

A hard reset can tell you whether a problem is caused by your Treo or an application installed on your Treo. If a hard reset eliminates the problem, the problem may have been caused by software you installed on your Treo. See page 153 for suggestions on diagnosing third-party software issues.

1. Unscrew the stylus tip to access the reset tool.
2. While holding the Wireless Mode button ⏻, use the reset tool to gently press the reset button on the back of your Treo.
3. When the Palm Powered logo appears, release the Wireless Mode button ⏻.
4. When the warning appears, press Up ▲ to confirm the hard reset.
5. If a language selection screen appears, choose the same language you selected for your desktop software.


Screen



The screen appears blank

1. Look closely at the screen. If you can see a dim image, try adjusting the screen contrast and brightness (see page 121).
2. If adjusting the contrast and brightness doesn't resolve the problem, perform a soft reset (see page 139).
3. If performing a soft reset doesn't resolve the problem, connect the Treo to the AC charger (see page 13) and perform a soft reset again.
4. If another soft reset doesn't resolve the problem, perform a hard reset (see page 140).

The screen doesn't respond accurately to taps or the wrong features are activated

1. Press Applications Launcher .
2. Choose the pick list in the upper-right corner, and then select All.
3. Choose the Prefs icon.
4. Choose the pick list in the upper-right corner, and then select Touchscreen.
5. Follow the onscreen instructions to recalibrate the touchscreen.



Become familiar with low coverage areas where you live, commute, work, and play. Then, you will know when to expect signal strength issues.

Network connection

Signal strength is weak

1. If standing, move about 10 feet in any direction.
2. If you are in a building, move near a window. Open any metal blinds.
3. If you are in a building, move outdoors or to a more open area.
4. If you are outdoors, move away from large buildings, trees, or electrical wires.
5. If you are in a vehicle, move your Treo level with a window.

Treo won't connect to the wireless network

1. Try our suggestions above for weak signals.
2. Turn off Wireless Mode and turn it on again (see page 15).
3. Perform a soft reset (see page 139).

Treo hangs up when I hold it to my ear

You may be accidentally pressing the onscreen Hang Up All button with your cheek. Try holding the phone so your face doesn't press against the screen. If this is not convenient, you may want to disable the touchscreen during active calls (see page 130).

Treo makes or answers calls when it's in a briefcase or pocket

Items in your briefcase or pocket may be pressing the onscreen Answer button, or otherwise activating screen items. If this happens, you may want to disable the touchscreen during incoming calls (see page 130).

I can't tell if data services are available

- The following icons indicate data services:



Wireless Mode is on but you are not connected to any data network.



You are connected to a data network. When the arrows are gray, you are in standby mode and you can receive calls. When the arrows are green, a data session is active (for example, when you are browsing the web) and you cannot receive calls.




Wireless Mode seems to turn off by itself


If a system error and reset occurs, Treo automatically turns on Wireless Mode if it was on before the reset. However, if Treo can't determine whether Wireless Mode was on before the reset, it does not turn on automatically and you must manually turn on Wireless Mode (see page 15).

Treo won't connect to the Internet

Your Treo supports high speed (Simple IP) data services. To connect to the Internet, you must subscribe to and activate data services with your wireless service provider.

- Press and hold the Wireless Mode button  to turn off Wireless Mode. Then, press and hold the same button to turn it back on again.
- Perform a soft reset (see page 139).
- For additional suggestions, see www.palmOne.com/support.
- Contact your wireless service provider to verify that your subscription plan includes high-speed data services and that these services have been correctly activated. Your wireless service provider should also be able to tell you if there are any outages in your location. Confirm your user name and password.



- Confirm that high-speed data services are correctly configured on your Treo:
 1. Press Applications Launcher .
 2. Choose the pick list in the upper-right corner, and then select All.
 3. Choose the Prefs icon.
 4. Choose the pick list in the upper-right corner, and then select Network.
 5. If the Service field says Untitled, choose the Service pick list, and then select the appropriate data service. Call your wireless service provider for more information about their data services.
 6. Choose Connect.

I can't send or receive text messages

- Make sure Wireless Mode is turned on (see page 15).
- Contact your wireless service provider to verify that your plan includes messaging services, that these services have been correctly activated, and that they are available at your location. (Your wireless service provider should be able to tell you if messaging services have been experiencing transmission delays.)
- If possible, contact the recipient or sender of the message, and make sure the receiving device can handle the type of file that is being sent.
- If a text message arrives but does not display an alert, perform a soft reset (see page 139).


Synchronization (HotSync)

Synchronization lets you back up your Treo data onto your computer. If you ever need to perform a hard reset or otherwise erase all your data on your Treo, you can perform a HotSync operation to restore the data. To make sure you always have an up-to-date backup of your data, synchronize frequently.


Before you attempt a HotSync operation, make sure that you installed Palm Desktop software and HotSync Manager from the CD that came with your Treo.

Desktop does not respond to HotSync attempt

Perform a HotSync operation after each of these steps. If the synchronization is successful, you do not need to complete the remaining steps.

1. Verify that the HotSync cable is securely connected at all points (see page 30).
2. Make sure that HotSync Manager is running:
 - **Windows:** Click the HotSync Manager icon  in the lower-right corner and make sure Local USB is checked. If you don't see the HotSync Manager icon, click Start, select Programs, select palmOne and then select HotSync Manager.



- **Macintosh:** Find the Palm folder on your Mac hard drive. Double-click the HotSync Manager icon  in the Palm folder. In the Connection Settings panel, set the Local Setup Port to palmOne USB.
3. Verify with your computer hardware vendor that your operating system supports your internal USB Controller.
4. Perform a soft reset (see page 139).

???



Every device needs a unique name. Never synchronize more than one device to the same user name on your computer.

If you're using an optional serial HotSync cable, click the HotSync Manager icon on your computer and make sure Local Serial is checked.



5. If problems persist and you're synchronizing through a USB hub, try connecting the HotSync cable to a different USB port, or directly to your computer's built-in USB port.
6. Uninstall Palm Desktop.
7. Reboot your computer.
8. Reinstall Palm Desktop.

HotSync operation starts but stops without finishing

Perform a HotSync operation after each of these steps. If the synchronization is successful, you do not need to complete the remaining steps.

1. If you upgraded from a previous Palm Powered device, there may be conflicts with files from your previous device. Locate your Backup folder (Windows: C:\Program Files\Palm\user name or C:\Program Files\Handspring\user name; Macintosh: Mac HD\Applications\Palm\Users\user name or Mac HD\Applications\Handspring\Users\user name). Move the Backup folder to another location (such as your computer desktop). Perform a HotSync operation, and then manually reinstall any third-party applications you want on your new phone from the items in the old Backup folder you moved.
2. (Windows only) If the Windows New Hardware Wizard appears, the HotSync process may be timing out before the wizard completes its job. Follow all instructions in the New Hardware Wizard, and attempt another HotSync operation.
3. Uninstall Palm Desktop.
4. Reboot your computer.
5. Reinstall Palm Desktop.

HotSync operation finishes but data does not appear where it should

1. Make sure you're synchronizing with the intended desktop Personal Information Manager (PIM). The CD that came with your Treo lets you synchronize with Palm Desktop or Microsoft Outlook for Windows. If you use a different PIM, you will need to install third-party software to synchronize. Consult the company that makes the PIM for more information.
2. If there are multiple Palm Powered devices synchronizing with your computer, make sure you are synchronizing with the correct user name. If data is not appearing in Palm Desktop, make sure the correct user name is selected in the toolbar of Palm Desktop.
3. Launch the HotSync Manager application on your computer, and make sure the necessary conduits are set to Synchronize the files.
4. Uninstall Palm Desktop.
5. Reboot your computer.
6. Reinstall Palm Desktop.
7. (Outlook only) With the included software, your Treo can synchronize with the root folders of Contacts, Calendar, Tasks, and Notes. If you want to synchronize with a global Exchange Address Book, you must copy the addresses to your local Contacts list in Outlook (right-click the addresses, and select Add to Personal Address Book).
8. (Outlook only) Outlook subfolders and public folders are not accessible with the included software. You may wish to use a third-party solution instead.
9. (Outlook only) If you're trying to synchronize offline, be sure to set your Outlook Calendar, Contacts, Notes, and Tasks to be available offline.

???



The software that lets you synchronize with Microsoft Outlook is called PocketMirror, from Chapura, Inc. When you install the Treo software from the CD, PocketMirror will be activated if you choose the option to synchronize with Outlook.





If you use web-based email (Hotmail, AOL) or corporate email (Microsoft Outlook, Lotus Notes), the Mail application that comes with Treo will not work. You must use a third-party solution.

Contact your email service provider if you are not sure whether your email account is POP3-compatible.


Mail




I can't receive email

First, make sure you have Internet access: launch the Blazer web browser to see if you can view a web page you've successfully viewed before. If necessary, ensure that you are viewing the page directly from the Internet: press Menu , and then from the Page menu, choose Refresh. The email account you use with the Mail application must be a POP3-compatible account, such as Earthlink.



1. In Mail, press Menu .
2. From the View menu, choose Edit Accounts.
3. Highlight an account, and then choose Edit.
4. Make sure your email address and password are correct.
5. Choose the Server tab.
6. Check the Incoming (POP3) Server and Outgoing (SMTP) Server settings for your email account. If you do not have this information, please contact your email service provider.
7. Choose OK to accept these settings.
8. Choose Done.

Other things to consider when trying to retrieve email:

- In Mail, press Menu , and then from the Options menu, choose Connection Log. This log contains details and error messages from the last several send and receive sessions.
- Mail does not automatically retrieve your email when:
 - Your radio is off.
 - You are outside the automatic delivery time window. See page 80 for more information on customizing your mail settings.

- Some email preferences may not work with your Treo or your wireless network's capabilities. To view these settings, press Menu , and then from the View menu, choose Edit Accounts. Choose an account and press Right  to choose Edit. Each setting is explained in detail in the Tips for that tab. Contact your email service provider to determine the correct settings for your email account.
- Auto-retrieve settings apply to only the mail account you are currently viewing. If you have two accounts, Treo auto-retrieves emails for only the current account. To change the current account, press Menu , and then from the View menu, choose another account.

I can't open or save an attachment

- You can open only attachments that are supported by the built-in software on your Treo or by third-party applications that can open the attachment type. If you can't open an attachment on your Treo, the attachment appears with the paperclip icon .
- Large attachments may be truncated, which prevents you from saving them. Scroll to the bottom of the email message to see if this is the case. To retrieve the rest of the attachment, press Menu , and then from the Message menu, choose Get Entire Message. This downloads the remainder of the attachment so that you can save it.

I can't send email

Your ability to send email depends on several factors. You may need to enter additional information into the Mail application. Also, some wireless service providers use Internet security requirements that may cause difficulties with your email service.



When retrieving messages, you may see a larger number of messages than you actually receive (e.g. you see Retrieving 1 of 10 messages and you only receive 3 messages). If this happens, check your Delivery Preferences. If the preferences are set to retrieve only recent emails, any older emails may appear in the total number, but are not delivered to your Treo.





First, obtain this information from your wireless service provider:

- Does the Internet connection they provide support sending SMTP emails?
- Is there an alternate SMTP authenticated server used for email?
- Is SSL required for POP3 or SMTP email transactions?

Next, contact your email service provider for this information:

- Does this provider support the POP3 protocol? If they don't, you won't be able to use Mail for this email account.
- Does this provider allow email access from wireless phone networks?
- What is the user name for your email account?
- What is the outgoing (SMTP) server for your email account? Does it require authentication? Does it require SSL? Does it use the same user name for POP3 and SMTP?

Last, follow these steps:

1. In Mail, press Menu .
2. From the View menu, choose Edit Accounts.
3. Highlight the account you want to edit, and then choose Edit.
4. Make sure your email address and password are correct.
5. Choose the Server tab. Tap the Information icon  for a detailed explanation of Server settings.
6. Enter the correct Incoming (POP3) Server setting for your email account. Enter the SMTP server used by your wireless service provider for email.
7. Choose the Advanced tab. Tap the Information icon for a detailed explanation of Advanced settings.
8. Check or uncheck the boxes for SSL required for POP3 and SMTP, according to the information you received.
9. If necessary, enter your user name. Also enter your email password in the box.
10. Choose OK to accept these settings; then choose Done.

Web



I can't access a page

- Make sure Wireless Mode is turned on (see page 15).
- Check your Internet access: launch Blazer[®] and try to view a web page you've loaded before. Press Menu (menu), and then from the Page menu, choose Refresh to get the latest version from the Internet. After confirming your Internet connection, try to view the page again, and press Menu (menu), and then from the Page menu, choose Refresh.
- If you still have trouble, the page may contain elements that are not supported by Blazer. These include Flash, Shockwave, VBScript, WML script, and other plugins.
- Some web sites use a redirector to the true page (for example, the address <http://www.palmOne.com/support> may resolve to <http://www.palmOne.com/us/support>). If Blazer can't follow the redirect, use a browser on your computer to see where the redirect sends you, and enter that address in Blazer.

An image or map appears too small on the Treo screen

Blazer has two modes: Optimized and Wide Page. Optimized Mode resizes all images and page elements to fit in a single column on the Treo screen. Switch to Wide Page mode to see the full-size image (see page 57).

A secure site refuses to permit a transaction

Some web sites don't support certain browsers for transactions. Please contact the site's webmaster to make sure the site allows transactions using Blazer.



Treo can launch your email application when you choose an email address on a web page. If nothing happens when you choose the link, try setting up your email application first.



Pictures

The Pictures application takes pictures at Small picture size (160 x 120 pixels) and Large picture size (640 x 480 pixels, or 0.3 megapixel). Here are some tips for taking good pictures with the built-in camera:

- Clean the camera's lens with a soft, lint-free cloth.
- Take pictures in bright lighting conditions. Low-light images may be grainy, due to the sensitivity of the camera.
- Hold the camera as still as possible. You may want to support your picture-taking arm against your body or a stationary object (such as a wall).
- Keep the subject of the pictures still. Exposure time is longer with lower light levels, so you may see a blur.
- For best results, verify that you have the brightest light source coming from behind you, lighting the subject's face. Don't take indoor pictures with the subject in front of a window or light.
- Make sure the subject is at least 18 inches away from the camera to ensure good focus.

Remember that when you synchronize, your pictures are stored in the Treo Pictures folder on your hard drive (see page 66).

The camera preview image looks strange

Some third-party applications overwrite the Treo's color settings with their own 8-bit color settings. This can affect the camera's preview mode. Delete third-party applications one-by-one until the preview image improves.

When using the camera in low light, you may see blue specks on the screen. Once you capture the image, the quality improves, and many of the blue specks disappear.

Third-party applications



Sometimes, third-party applications can cause conflicts on your Treo. Third-party applications that modify wireless features may require extra troubleshooting.

If you recently installed an application and your Treo seems to be stuck, try the following:

1. Perform a soft reset (see page 139).
2. If the problem persists, perform a system reset (see page 139).
3. Delete the most recently installed application from your Treo (see page 109).
4. If the problem persists, perform another system reset.
5. Delete other third-party applications one at a time until you eliminate the problem.
6. If none of the steps above are possible, you may wish to perform a hard reset (see page 140). Then, locate your Backup folder on your computer (Windows: C:\Program Files\palmOne\user name; Macintosh: Mac HD\Applications\palmOne\Users\user name). If you find a .prc or .pdb file for any applications you just removed, delete the file(s) from the Backup folder. Then, perform a HotSync operation to restore your data and applications.

Remember, not all third-party applications are optimized for the Treo keyboard and 5-way navigation control. You may encounter strange behavior or errors in these applications if you use the keyboard and navigation control.

Getting more help


Contact the author or vendor of any third-party software if you require further assistance.



Errors

Your Treo is designed to minimize interruptions, when a system error occurs. If Treo encounters a system error, it automatically resets itself and resumes functioning as normal. If possible, it even turns Wireless Mode back on if it was on before the error occurred.

Sometimes you might want to know more about an error. Treo uses a special interface to show error messages in greater detail.

1. Press Phone .
2. Press Center, and then choose Dial Pad.
3. Type ##377, and then press Center.
4. Review the screen with details about the conditions that lead up to the most recent automatic reset.
5. Choose OK.

Please note that third-party developers create their own error messages. If you do not understand an error message, please contact the developer of the application for help.

Making room on your Treo



If you store a large number of records, or install many third-party applications, the internal memory on your Treo may fill up. Here are some common ways to clear space on your Treo:

- **Mail:** Emails that have large attachments can quickly consume memory on your Treo. Delete emails with large attachments. If you have hundreds of messages with or without attachments, you may want to delete older messages to make room (see page 78).
- **Pictures:** Large-size pictures take up a lot of memory. Move pictures to an expansion card or delete pictures from your Treo (see page 64).
- **Internet:** If you have set a large Blazer cache, you can use Blazer's advanced Memory Management settings to clear all recent pages (see page 61).
- **Third-party applications:** You can delete infrequently used applications or move them to an expansion card (see page 113).

Also, remember that your Treo includes an expansion slot, and that you can store applications and data on expansion cards. However, you still need some free memory on the Treo itself to run applications from an expansion card.



Voice quality

Is the other person hearing an echo?

- Try decreasing the Treo's volume to avoid coupling or feedback on the other person's end. This applies to both speakerphone and the built-in handset speaker.
- Position the Treo handset closer to your ear to prevent sound leaking back to the microphone. Keep your hand away from the microphone hole, which is on the back of your Treo near the bottom of the device.
- If you're using Speakerphone mode with the device lying on a flat surface, try turning the Treo "face down" (screen facing the surface).



Are you hearing your own voice echo?


- Ask the other person to turn down their volume or hold the phone closer to their ear.

Is your voice too quiet on the other end?

- Be sure to hold the bottom of the Treo, or the hands-free microphone, close to your mouth.

Glossary

Alt (alternative) : A keyboard key. Type a letter on the keyboard, and then press Alt  to access variations such as international characters and symbols.

Applications Launcher : The view on your Treo™ 600 smartphone from which you can launch all applications.

Auto-off interval: The time of inactivity that passes before the screen on your Treo turns off. Wireless Mode is unaffected by this setting.

Beam: The process of sending or receiving a data record or application using the infrared port on your Treo.

HotSync®: The technology that synchronizes your Treo and your computer with the simple press of a button.


HotSync Manager: The computer application that manages the synchronization with your Treo.

Infrared (IR): A way of transmitting data using light waves. The IR port on your Treo lets you transfer data between other IR devices within a short radius.

Install tool: The component of Palm® Desktop software that enables you to install Palm OS® applications and data on your Treo.


Lithium Ion (Li-Ion): The rechargeable battery technology used in Treo phones.

Lock Code: The four-digit password assigned to your phone by your wireless service provider. Turning on the Lock Code secures your wireless account.

Option key : The keyboard button that lets you access the alternative feature that appears above the letter on each key.

Palm Desktop: A PIM application for computers that helps you manage your personal information and keep your personal data synchronized with your Treo.

Palm OS: The operating system of your Treo smartphone. Palm OS is known for its simplicity of use and for the large number of applications that can be added to your Treo.

Phone : The application on your Treo that provides quick access to the most commonly used applications on your Treo.

PIM (Personal Information Management): A category of software that includes applications such as Palm Desktop software, Microsoft Outlook, Lotus Notes, and ACT!. PIMs generally store contacts, schedules, to do items, and memos.

PocketMirror: Software included on the Treo CD that lets you synchronize with Microsoft Outlook (English language and Windows only). PocketMirror is made by a third-party company called Chapura, Inc.

Simple IP: High-speed mobile data technology that enables rapid access to network data services including Internet connectivity.

SMS (Short Messaging Service): The service that exchanges short text messages almost instantly between mobile phones. These messages can usually include up to 140 characters. Treo phones can send and receive text messages while you are on a voice call.

User name: The name associated with your Treo that distinguishes it from other Palm Powered™ devices. When you first synchronize your Treo, you are asked to give it a user name.

Wireless Mode: The feature inside your Treo that controls the radio which enables you to connect to the mobile network for wireless communications.

FCC Statement This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet or circuit different from that to which the receiver is connected

Consult the dealer or an experienced radio/TV technician for help and for additional suggestions.

RF Safety Exposure To Radio Frequency Energy (SAR) Radio transmitting devices radiate Radio Frequency (RF) energy during its operation. RF energy can be absorbed into the human body and potentially can cause adverse health effects if excessive levels are absorbed. The unit of measurement for human exposure to RF energy is "Specific Absorption Rate" (SAR).

The Federal Communications Commission (FCC), Industrie Canada (IC), and other agencies around the world have established limits that incorporate a substantial safety margin designed to assure the safety of all persons using this equipment.

In order to certify this unit for sale in the US, Canada and Europe this unit has been tested for RF exposure compliance at a qualified test laboratory and found to comply with the regulations regarding exposure to RF Energy.

SAR was measured with the unit transmitting at its maximum certified RF power. Often, however, during normal operation the unit will transmit much less than maximum power. Transmit power is controlled automatically and, in general is reduced as you get closer to a cellular base station. This reduction in transmit power will result in a lower RF energy exposure and resulting SAR value.

FCC RF Safety Statement In order to comply with FCC RF exposure safety guidelines, users MUST use one of the following types of body-worn accessories.

1. A palmOne brand body-worn accessory that has been tested for SAR compliance and is intended for use with this product.
2. An accessory that contains NO metal (snaps, clips, etc) and provides AT LEAST 1 cm of separation between the users body and the unit.
Do NOT use the device in a manner such that it is in direct contact with the body (i.e. on the lap or in a breast pocket). Such use will likely exceed FCC RF safety exposure limits See www.fcc.gov/oet/rfsafety/ for more information on RF exposure safety.

Responsible party

(North America)
palmOne, Inc.
400 N. McCarthy Blvd.
Milpitas, CA 95035
USA
www.palmOne.com

(Europe)
Vesey Chrichton
Buckhurst Court
London Road
Wokingham, Berkshire RG40 1PA,
UK

Antenna Care/Unauthorized Modifications Use only the supplied integral antenna. Unauthorized antenna modifications or attachments could damage the unit and may violate FCC regulations. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Potentially Unsafe Areas / Potentially explosive atmospheres Obey all signs and instructions regarding turning off your phone. In particular, turn off your phone when you are in any areas with a potentially explosive atmosphere, such as fueling areas (gas or petrol stations, below deck on boats), storage facilities for fuel or chemicals, blasting areas and areas near electrical blasting caps, and areas where there are chemicals or particles (such as metal powders, grains, and dust) in the air.

Declaration of Conformity

Treo Model 600 palmOne declares that the above models of Treo smartphones are compliant with the regulations below. The declaration applies to the communicators and their associated accessories (power supply, headset, USB and serial cable) where applicable.

Maximum Measured SAR Values (W/kg)

| Band: | 850 MHz | 900 MHz | 1800 MHz | 1900 MHz |
|----------------------------------|---------|---------|----------|----------------------------------|
| Head SAR: | 1.49 | 1.07 | 1.53 | 1.05 |
| Body SAR: | .646 | .703 | .402 | .336 |
| EMC: EN 301 489 | | | | GSM: EN 301 419-1(Apr 2000) |
| EN 310 420 (Dec 1999) | | | | SAR: ANSI/IEEE C95.1 1992 |
| EN 50360 (July 2001) | | | | EN 50361 (July 2001) |
| FCC OET Bulletin 65 Supplement C | | | | Safety: EN 60950:2000 (Jan-2000) |
| Radiated Emissions: EN 55022 | | | | Immunity: EN 55024 |

Using TTY

A TTY (also known as TDD or Text Telephone) is a telecommunications device that allows people who are deaf or hard of hearing, or who have speech or language disabilities, to communicate by telephone.

Your Treo 600 is compatible with select TTY devices. You can connect a TTY/TDD machine to your phone through the headset jack, but you cannot use your headset jack with a headset or hands-free kit while this mode is enabled. Please check with the manufacturer of your TTY device for connectivity information and to ensure that the TTY device supports digital wireless transmission.

To use TTY, you may need to make additional arrangements with your wireless service provider. Please contact their customer service department for more information.

1. Press Phone.
2. Press Menu.
3. From the Options menu, choose Phone Preferences (/A).
4. Choose the TTY Mode pick list. Then select the appropriate mode.
5. Choose OK. A red "T" appears at the top of the Phone screen whenever TTY is enabled.

Index

Numerics

24-hour clock 127

5-way navigation control. *See under*
five

A

AC charger 13

accented characters 25, 26

accessing

 applications 27, 28

 common tasks 52

 Dial Pad 46

 web pages 56, 57

activating

 application menus 22

 keyboard backlight 24

 on-screen buttons 22

 speakerphone 46

 web links 56

active call 46

Active Call view 46, 129

adding

 alarms to events 85

 bookmarks 57

 Caller ID pictures 53, 118

 cities to world clock 95

 contacts 50

 events 84, 86

 expansion cards 111, 112

 memos 93

 passwords 133

 personal information 132

 QuickText phrases 67

 speed dial buttons 53

 text messages 67

 To Do items 90

 additional information and resources
 35, 153

 Address Book. *See* Contacts View

 addressing

 text messages 67, 71

 adjusting

 brightness 121

 call volume 17, 43, 118

 screen contrast 16, 121

 system sounds 128

 Advanced Calculator mode 96

 alarms 85, 117

 alert tones 116

 alerts

See also alarms

 adjusting volume for 128

 incoming messages 45, 68

 selecting tones for 116

 turning off 120

 viewing pending 85

 aligning the touchscreen 122

 alternate characters 25, 26

 annual events 86

 answering phone calls 43

 antenna 10

 application buttons and icons 27,
 123

 applications

See also specific application

 accessing 27, 28

 active calls and 47

 associating with buttons 54,
 124

 beaming 103

 categorizing 123

 copying 113

 installing 107, 108, 124

 launching 27, 112, 124

 removing 109, 152, 155

 setting default 125

 troubleshooting third-party
 108, 153

 viewing statistics about 110

 Applications Launcher 28, 112, 123

 appointments. *See* events

 Archive folder 109

 area conversions 97

 assistance 35

 audio files 43

 Auto Lock Handheld setting 131

 Auto-Keyguard setting 130

 Auto-off setting 34, 128

B

 backing up data 29, 137, 145

 backlight 13, 15, 24, 121

 Basic Calculator mode 96

 basics 6, 8, 35

- battery
 - charging 13, 33
 - consumption factors for 13
 - maximizing life of 15, 33, 121
 - resetting handset and 139
 - viewing status of 14, 39

- battery gauge 14

- Beam Business Card command 51

- Beam Category command 102

- Beam command 102, 103

- Beam Status dialog box 102, 103

- beaming

 - applications 103

 - information 102, 104, 128

- beeps 128

- blank screens 141

- blank time slots 88

- Blazer web browser 56–62, 155

- blue dots 63

- Bookmark view 58

- bookmarks 57, 58

- brightness 121

- browsing. *See* web browsing

- buddy lists 50

- built-in applications 106, 109

- business cards 51, 102

- business software 106

- buttons

 - associating with applications 54, 124

 - disabling 129

 - highlighted 21

 - navigation control 20

 - restoring defaults for 124

 - selecting 21, 22

 - setting preferences for 124

C

- calculators 96–98

- calendar 84–89

- Calendar button 11, 84

- calendar views 88

- call forwarding 39, 49

- Call Log view 42

- call waiting 48

- Caller ID pictures 53, 63, 118

- calls. *See* phone calls

- camera 65, 152, 155

- camera lens 12

- cancelling selections 23

- Caps Lock 25

- Card Info application 114

- categorizing

 - applications 123

 - memos 93

- Change Location command 95

- changing

 - bookmarks 58

 - contact information 51

 - due dates 92

 - Favorites buttons 54

 - lock codes 131

 - passwords 130

 - QuickText phrases 67

 - screen fonts 121

 - text entries 21

 - character sets 25, 26

 - character strings 100

 - charge indicators 11, 39

 - charger cable 13

 - charging the battery 13, 33

 - chat sessions 69, 70, 71

 - checking voicemail messages 39

 - clock 94–95, 126

 - closing application menus 23

 - color preferences

 - system 122, 128

 - text messages 72

 - command buttons 22

 - company searches 100

 - composing. *See* creating; entering

 - compressed files 106

 - computers

 - connecting handset to 30

 - setting up 29–31

 - conduit software 32

 - conference calling 48

 - connections 15, 30, 44, 142

 - conserving battery power 15, 33,

 - 121

 - contact name, dialing by 40

 - contacts

 - adding 50

 - changing information for 51

 - getting information about 40

 - locating 99

 - marking as private 50

 - removing 51

 - Contacts View 50

- contrast (screen) 16, 121
 - conversion functions (calculator) 96
 - copying
 - applications 113
 - phone numbers 41
 - pictures 65
 - text 60
 - copyrighted pictures 64
 - coverage areas 16, 142
 - creating
 - bookmarks 57
 - business cards 51
 - Caller ID pictures 53, 118
 - cities for world clock 95
 - contacts 50
 - events 84, 86
 - memos 93
 - passwords 133
 - QuickText phrases 67
 - speed dial buttons 53
 - text messages 67
 - To Do Lists 90
 - customer assistance 35
 - customizing
 - Blazer web browser 61
 - calendar 87
 - camera settings 65
 - passwords 44
 - phone 116
 - Pictures settings 65
 - SMS messaging 71
 - system colors 122
 - To Do Lists 89, 92
- D**
- damaged expansion cards 111
 - data
 - See also* information
 - backing up 29, 137, 145
 - expansion cards and 111
 - keeping private 129
 - losing 136, 145
 - restoring 145
 - storing on handset 33, 111
 - synchronizing 29, 32, 145–147
 - transferring 39, 102
 - data entry 25
 - data services 8, 56, 143
 - dates
 - See also* calendar
 - assigning to events 84, 86
 - setting for alarms 85
 - setting for To Do items 89, 91, 92
 - setting system 126
 - specifying formats for 127
 - datestamps 71
 - Day view 84
 - daylight savings 126
 - decimal values (calculator) 97
 - decompression utility 106
 - definitions 157
 - delays 131
 - deleting
 - applications 109, 152, 155
 - bookmarks 58
 - contacts 51
 - events 86
 - Favorites button 54
 - memos 93
 - passwords 130
 - pictures 65
 - text messages 69, 71
 - To Do items 90, 91
 - Dial Extra Digits option 53
 - Dial Pad 41, 42, 46, 118
 - dialing 16, 40–42, 46
 - See also* phone calls
 - disabling
 - handset 129
 - incoming calls 43
 - disclaimer 2
 - discussion groups 35
 - displaying
 - application information 110
 - bookmarks 58
 - calendar 84, 87, 88
 - events 88
 - expansion card information 114
 - images 56, 61
 - pictures 64, 66
 - private records 134
 - recently dialed numbers 42
 - text messages 68
 - To Do List items 89, 90, 92
 - web pages 56, 58
 - documentation 9, 20
 - Don't Show Images check box 56

downloading
files 59
images 59
Palm Desktop software 2
downsizing pictures 64
drawings. *See* images; pictures

E

echoes 156
Edit Bookmarks command 58
Edit Cities command 95
Edit Favorites Button command 54
Edit Favorites Pages command 54
Edit Name command 65
editing. *See* changing
email
See also text messages
active calls and 47
attaching items to 75
creating 75
deleting 78
forwarding 77
receiving 76
replying to 77
requirements for 8
sending 68, 151
setting up 73
viewing attachments 77
email applications 68, 151
emergency calls 129, 131
emotive symbols 67
empty battery icon 14
engineering notation 98

entering
information 25
multiple contacts 50
numbers in calculator 96
passwords 45, 53
personal information 132
phone numbers 40, 41
text messages 67
error messages 108
events
creating 84–87
displaying 88
setting preferences for 87, 88
expansion cards
adding 111, 112
beaming to 102
copying to 64, 113
formatting 114
removing applications from
109
running applications from 112,
155
viewing information about 114
expansion slot 10, 111
Extra Digits setting 46, 53

F

Favorites buttons 41, 52–54, 118
features (Treo handset) 9
feedback 156
files
decompressing 106
downloading 59

financial calculator 96, 97
Find dialog box 100
Find More button 100
finding
information 99
owner phone number 17
text 61, 100
5-way control buttons 20
5-way navigation control
adding contacts with 50
answering calls from 43
choosing items with 22, 23
dialing with 40
displaying calendar with 84
highlighting items from 21
location of 11
scrolling with 20
fixed point notation 97
floating events 88
fonts 121
forgetting passwords 134
Format Preferences settings 127
formatting expansion cards 114
forwarding phone calls 49
freeing memory 90, 109, 155
full battery icon 14
functions (calculator) 96

G
games 33, 106, 128
General Preferences settings 128
getting started 6, 8, 35
Glossary 157

graphics. *See* images
green lightning bolt 14

H

handset. *See* Treo handset
Hang Up All button 46
hard resets 131, 140, 145
headsets 11, 55
help 35, 153
hexadecimal characters 97
hiding images in web pages 56
hiding private records 133
highlighting 21, 23
hints 35
History list 60
Hold button 46
Home City setting 94
Home Page option 61
HotSync button 124
HotSync cable 29, 30, 145
HotSync connector 11
HotSync Manager 32, 145
HotSync operations 32, 145–147

I

image files 66
images
 See also pictures
 assigning to Caller ID 53, 118
 displaying in web pages 56,
 61
 downloading 59

resizing 64
storing 155
troubleshooting 151, 152

importing phone numbers 91
Inbox 69
incoming messages 69
Info screens 110
information
 backing up 29, 137, 145
 beaming 102, 128
 entering 25
 finding 99
 in reverse type 21
 receiving 104
 recording personal 132
 synchronizing 32, 145–147
 transferring to handset 29, 39
 updating 32
 viewing application 110

Information icon 35
Infrared port. *See* IR port
installing
 applications 107, 108, 124
 Palm OS software 106, 138
 synchronization software 29,
 31

international characters 26
Internet connections 15
invalid characters 67
IR port
 beaming from 102, 103, 104
 location of 10

J

JPEG files 66

K

keyboard
 dialing with 40
 locking 129
 overview 24–25
keyboard backlight 13, 15, 24, 121
Keyboard Help command 25
keyboard shortcuts 22
keyguard feature 16, 129

L

launching applications 27, 112, 124
LED indicator 11, 13, 33
length conversions 97
lens (camera) 12
liability 2
listening to music 55
lists
 cancelling selections in 23
 choosing items in 22
 highlighting items on 21
 moving through 20
 selecting options in 23
loading web pages 56, 61
locating
 information 99
 owner phone number 17
 text 61, 100
Location icon 50

- lock codes 131
- lock icon 56, 103, 109
- Lock Wireless Mode options 130
- locked messages 69
- locking the handset 129, 130, 131
- logic functions (calculator) 97
- losing data 136, 145
- low coverage areas 142
- lowercase letters 25

M

- Macintosh information
 - installing applications 108
 - installing synchronization software 29
 - removing applications 109
 - synchronizing data 145
- magnet 12
- Mail application 73–81
- manually activating backlight 15
- manually setting clock 126
- maps 151
- masking private records 133
- mathematical constants 97
- mathematical functions 96
- maximizing battery life 15, 33, 121
- media players 33
- Memo Pad 93
- memory 90, 109, 112, 155
- memory slots (calculator) 97
- memos 93
 - See also* messages; notes
- Menu button 22

- menus 22
- messages
 - See also* text messages
 - checking voicemail 39
 - retrieving voicemail 39, 45
 - reverse type in 21
 - sending to voicemail 43
 - setting alerts for 117
- messaging services 8
- metric conversions 97
- microphone 11, 46, 55, 156
- Microsoft Outlook. *See* Outlook
- Microsoft Windows. *See* Windows
- information
- MMC cards 111
- MMS messaging 8
- mobile accounts 35
- mobile phone. *See* Treo handset
- monthly events 86
- moving through
 - menu items 22
 - web pages 56, 57, 60
- MultiMedia cards 111
- multiple recipients 67
- music 43, 55
- Mute button 46

N

- Name Lookup feature 40, 99
- navigation buttons 20
- navigation control. *See* 5-way navigation control
- network status icon 16

- networks 142
- New Contact button 50
- New Text Message screen 68
- nighttime use 15
- No Service message 16
- Note Pad. *See* Memo Pad
- notes 50, 67, 91
 - See also* memos; messages
- notifications 45, 68
- numbers 25, 96, 98

O

- offline viewing (web pages) 58
- online forums 35
- online support 35
- opening
 - Blazer web browser 56
 - Dial Pad 46
 - Find dialog box 100
 - Phone application 38
- Optimized Mode (web pages) 56
- optimizing performance 30, 33
- Option Lock 25
- options 23, 88
 - See also* preferences
- organizer features 33, 83
- Outbox 69
- outgoing messages 69
- Outlook 29, 84, 138, 147
- owner preferences 132

- P
- Page View icon 56
- paging through web pages 56
- paging tool 20
- Palm Desktop software 2, 29
- Palm OS features 15, 28, 106, 138
- Palm Powered devices 147
- partial battery icon 14
- passwords
 - changing 44, 130
 - creating 133
 - entering 45, 53
 - forgetting 134
 - specifying as required 131
- PCs. *See* computers
- pending alerts 85
- performance 30, 33
- personal computers. *See* computers
- Personal Information Managers (PIMs) 138, 147
- phone (disabled) 13
- Phone application
 - accessing 38
 - creating business cards with 51
 - managing calls from 46
 - managing contacts from 50
 - monitoring information for 39
- Phone button 11, 38
- phone calls
 - adjusting volume for 17, 118
 - battery consumption and 13
 - defining ringtones for 53, 116
 - disabling incoming 43
 - displaying most recent 42
 - forwarding 49
 - losing 43
 - making duplicate 47
 - options for dialing 40, 46
 - placing on hold 46, 47, 48
 - prerequisites for 16
 - receiving 43
 - sending to voicemail 43
 - setting preferences for 116
 - setting up emergency 131
 - turning off ringer for 120
- phone headsets 55
- Phone Info option 17
- Phone Lock command 130
- phone numbers
 - adding speed dial buttons for 53
 - adding to To Do List 91
 - dialing extensions for 46, 53
 - dialing from text messages 42, 68
 - entering 40, 41
 - getting 17
 - labeling mobile 50
 - pasting to Dial Pad 41
 - redialing 42
 - specifying emergency 131
- Phone Preferences command 49
- phone receiver 11
- phone settings 116
- photographs. *See* pictures; images
- pick lists 21, 23
- Pictures 63, 65
- pictures
 - See also* images
 - adding Caller ID 53, 118
 - downsizing 64
 - managing 64
 - saving 63, 65
 - sending 64
 - setting size 65
 - taking with camera 63
 - viewing 64, 66
- Pictures view icon 64
- playing
 - music 55
- PocketMirror software 147
- power status 14
- power supply connector 11
- preferences
 - Blazer web browser 61–62
 - calendar 87
 - camera 65
 - owner 132
 - phone calls 116
 - Pictures 65
 - SMS messaging 71
 - system colors 122
 - To Do List 89, 92
- preset delays 131
- priority settings 69, 89, 91, 92
- privacy settings 68, 91, 133
- private records 133–134
- protecting data 129

punctuation characters 25, 26
Purge command 69, 90

Q

Quick Keys 52, 54
QuickText phrases 67

R

receiving
 information 104
 phone calls 43
 text messages 68
recharging handset 33, 39
recording voice messages 44
recurring events 86
red lightning bolt 14
redialing 42
refreshing web pages 56
Reminder screen 85
reminders 68, 85
 See also alerts
remote cities 95
removing
 applications 109, 152, 155
 bookmarks 58
 contacts 51
 events 86
 expansion cards 114
 Favorites button 54
 memos 93
 passwords 130
 pictures 65
 text messages 69, 71
 To Do items 90, 91
renaming
 expansion cards 114
 pictures 65
repeating events 86
rescheduling events 86
Reset button 12
reset tool 12, 139
resets 131, 139–140, 145
resizing images 64
restoring
 data 145
 factory defaults 124
 private records 134
reverse type 21
ringer 10, 43, 116, 120
Ringtone option 53
ringtones
 phone calls 53, 116
 selecting for caller ID 118
 text messages 68
 turning off 120
roaming 39

S

saving
 pictures 63, 65
 web pages 58
scheduling events 84, 86
scientific calculator 96
scientific notation 97
screen
 adjusting contrast 16, 121
 aligning 122
 auto shutoff setting for 128
 blue dots on 63
 disabling 46, 128, 129
 highlighting items on 21
 moving around in 20
 tapping Information icon on 35
 troubleshooting 141
 turning on and off 15, 34
Screen button 11
screen fonts 121
scroll arrows 21
scroll bars 21
scrolling 20
SD cards 65, 111
 See also expansion cards
searching
 information 99–101, 133
 web pages 61
Secure Digital cards. *See* SD cards
secure web pages 56, 151
security software 129, 134
Select Business Card command 51
Select Home City command 94
sending
 email 68, 151
 text messages 67, 69, 70
Sent folders 69
serial cables 29
short messaging. *See* SMS
messaging; text messages
shortcuts 22, 52, 137

- Show Due Dates option 92
- signal strength 13, 39, 142
- signals 34
- silencing the ringer 43, 116, 120
- silent alarms 85, 120
- sit files 106
- SMS button 11
- SMS messaging 54, 67, 70, 71
- Snooze option 68
- soft resets 139
- software 9, 29, 31, 138
 - See also* applications
- Sort by Date command 69
- Sort by Name command 69
- sorting
 - text messages 69
 - To Do List items 92
- Sound Mode Off option 43
- sounds 43, 120, 128
 - See also* alarms; music; ringtones
- Sounds icon 117
- speaker 12
- speakerphone 13, 46, 156
- special characters 25, 26
- specifications 55, 111, 173
- speed dial button 53
- Spkr-phone button 46
- stand by 39
- starting
 - applications 112
 - Blazer web browser 56
 - built-in tutorial 35

- statistical functions (calculator) 97
- status icons (text messages) 69
- stereo adapters 55
- storing
 - data 33, 111
 - Treo handset 12
- stylus 10, 16, 21, 22, 23
- support 35
- symbols 25, 26, 67
- synchronization software 9, 29, 31
- synchronizing data 29, 32, 145–147
- system resets 139
- system sounds 43, 120, 128

T

- taking pictures 63
- tasks. *See* To Do List
- technical support 35
- temperature conversions 97
- text
 - See also* messages; notes
 - copying 60
 - finding on web pages 61, 100
 - in reverse type 21
 - selecting 21
- text fields 21, 22
- text messages
 - addressing 67, 71
 - creating 67
 - deleting 69, 71
 - dialing from 42, 68
 - receiving 68
 - sending 67, 69, 70

- setting preferences for 71
- sorting 69
- troubleshooting 144
- viewing status of 69

- text selection tools 21
- third-party applications 106, 108, 124, 153, 155
- third-party software 20, 32
- three-way calling 48
- time 94, 95, 126
- time formats 127
- time slots (events) 84, 88
- time zones 126
- timestamps 71
- tips 35
- To Do List
 - checking off items 91
 - creating 90
 - displaying items in 89, 90, 92
 - prioritizing items in 90, 92
 - removing items 90, 91
 - setting preferences for 89, 92
- touchscreen. *See* screen
- transferring data 39, 102
- Treo handset
 - additional references for 56
 - aligning screen for 122
 - caution for storing 12
 - charging 13, 33, 39
 - components shipped 9
 - connecting to PCs 30
 - extending storage capacity

111

- features 9
- freeing space on 109, 155
- locking 129, 130, 131
- resetting 131, 139–140, 145
- setting up 16
- storing data on 33
- transferring information to 29, 39
- troubleshooting 153, 156
- turning on and off 15
- tutorial for 35
- viewing power status for 14
- trigonometric functions 97
- troubleshooting 138, 153, 156
- TTY icon 39
- turning down volume 17
- turning handset on and off 15
- turning on keyboard backlight 15, 24, 121
- turning on Wireless Mode 15
- turning screen on and off 15, 34
- Tutorial 35
- Typing Starts Contacts Search preference 40

U

- unauthorized users 129
- unlocking keyguard 16
- unlocking the handset 130
- unread messages 69
- untimed events 85, 86
- updating information 32
- upgrades 29, 109, 136, 146

- uppercase letters 25
- urgent messages 69
- URLs 68
- USB hubs 30
- USB ports 30
- user discussion groups 35

V

- viewing
 - application information 110
 - bookmarks 58
 - calendar 84, 87, 88
 - events 88
 - expansion card information 114
 - images 56, 61
 - pictures 64, 66
 - private records 134
 - recently dialed numbers 42
 - text messages 68
 - To Do List items 89, 90, 92
 - web pages 56, 58
- voice messages 44
- voicemail
 - checking messages for 39
 - retrieving messages 39, 45
 - sending messages to 43
 - setting up 44
- Voicemail Favorites button 44
- voicemail icon 45
- voicemail services 43, 44
- volume buttons 11, 17, 116, 118
- volume conversions 97

- VP icon 50

W

- wallpaper 63, 118, 119
- warranty 111
- web browsing
 - customizing 61
 - overview 56
 - requirements for 5, 8
 - troubleshooting 143, 151
- web links 21, 54, 56, 68
- web pages
 - adding bookmarks for 57
 - clearing cache for 155
 - copying from 60
 - dialing from 42
 - disabling images on 61
 - displaying 56, 58
 - navigating through 56, 57, 60
 - opening from text messages 68
 - refreshing 56
 - removing bookmarks for 58
 - reverse type in 21
 - saving 58
 - searching 61
 - setting Favorites buttons for 54
 - viewing history lists for 60
 - viewing offline 58
- weekly events 86
- weight conversions 97
- Wide Page Mode command 57

- Windows information
 - installing applications 106, 107
 - installing synchronization software 29
 - removing applications 109
 - synchronizing data 145, 146, 147
 - viewing pictures 66
- wireless accounts 35
- wireless connections 15
- wireless coverage areas 16, 34, 142
- wireless features 15, 33
- Wireless Mode 15, 39, 143
- Wireless Mode button 10
- world clock 94–95

Z

- zip files 106

Specifications

| | | |
|---|---|--|
| Radio | CDMA 1900/800 digital dual-band 1XRTT; also supports CSD | |
| Phone features | Personal speakerphone Hands-free headset jack (2.5 mm, 3-pin barrel connector) | Microphone mute option TTY compatible 3-way calling |
| Processor Technology | 144 MHz Texas Instruments OMAP (ARM) processor | |
| Expansion | SD™/MMC™ slot (SD I/O compatible) | |
| Battery | Rechargeable Lithium Ion Up to 3 hours full charge time | Up to 4 hours talk time Up to 10 days standby time |
| Palm OS® version | Palm OS 5.2.x | |
| Camera | VGA resolution (640x480), 0.3 megapixel | Automatic light balance |
| Size | 4.41 in x 2.36 in x .87 in (11.2 cm x 6.0 cm x 2.2 cm) without antenna | |
| Weight | 6.2 ounces (175 grams) | |
| IR | Yes | |
| Display | LCD CSTN Touchscreen (includes stylus) 3375 colors (11.5-bit color, compatible with 16-bit applications) | User-adjustable brightness and contrast |
| Keyboard | Built-in QWERTY keyboard plus 5-way navigation control Backlight for low lighting conditions | |
| Included software | Phone (including Palm OS Contacts, Favorites, Dial Pad) Pictures Blazer® Web Browser (Internet) Mail Memo Pad PocketMirror Standard (for synchronizing with Microsoft Outlook for Windows) | Calendar (Palm OS Date Book+) SMS (text messaging) To Do List Calculator (basic and advanced) Palm® Desktop and HotSync® Manager CityTime world clock |
| System requirements | Windows 98SE, Me, 2000, or XP with USB port. Windows NT4 requires serial cable, sold separately | Mac OS 10.1-10.3.x with USB port Later versions may also be supported |
| Operating and storage temperature range | 0C-40C 5% to 90% RH | |

